



Thanks for purchasing our Electronic Speed Controller (ESC). The power system for RC model can be very dangerous, so please read this manual carefully. In that we have no control over the correct use, installation, application, or maintenance of our products, no liability shall be assumed nor accepted for any damages, losses or costs resulting from the use of the product. Any claims arising from the operating, failure of malfunctioning etc. will be denied. We assume no liability for personal injury, consequential damages resulting from our product or our workmanship.

**01 Features**

- ★ Completely water-proof and dust-proof. The ESC works properly even under water. (Please remove the cooling fan when running car in water, and after running, please make the ESC clean and then dry it to avoid the oxidation of copper connectors)
- ★ External Programming Port (EPP), easy to connect with program card, and also works as power port for cooling fan.
- ★ Excellent start-up, acceleration and linearity features, suitable for truggy (especially short course trucks) and buggy.
- ★ The built-in switching mode BEC has powerful output to supply all electronic equipments.
- ★ There is a mounting stand for installing the ESC on chassis easily and firmly.
- ★ Proportional ABS brake function with 5 steps of maximum brake force adjustment, 8 steps of drag-brake force adjustment. Also compatible with the mechanical disc-brake system.
- ★ Multiple protection features: Low voltage cut-off protection / Over-heat protection / Throttle signal loss protection / Motor blocked protection
- ★ Easily programmed with the SET button of the ESC, and also compatible with pocket-sized Program Card.

**02 Specifications**

Model	WP-8BL100-RTR	WP-8BL150-RTR
Cont./Burst Current	100A/650A	150A/950A
Motor Supported	Sensored / Sensorless Brushless Motor (only in sensorless mode)	
Cars Applicable	1/8 Touring Car, SCT, Buggy Incl. Traxxas 1/10 Truggy, Buggy	1/8 Touring Car, Truggy, Buggy, Monster
Motor Limit	3S LiPo : 4068 size motor, KV≤3000 4S LiPo : 4068 size motor, KV≤2400	4S LiPo : 4274 size motor, KV≤3000 6S LiPo : 4274 size motor, KV≤2400
Resistance	0.0005 ohm	0.00035 ohm
Battery	8-12 Cells NiMH, 3-4S LiPo	8-18 Cells NiMH, 3-6S LiPo
BEC Output <i>Note 1</i>	6V/5A, Switch mode	
Programming Port	FAN / PRG Port	
Dimension	59.5(L) × 48(W) × 42(H)	
Weight (With Wires)	173g	178g


*NOTE1* : The cooling fans of ESC is supplied by the built-in BEC, so it is always working under 6V.

**03 Begin To Use The New ESC**

**WARNING!** For safety, please always keep the wheels away from the track when switching on the ESC.

**1. Connect The ESC, Motor, Receiver, Battery And Servo**


The #A, #B, #C wires of the ESC can be connected with the motor wires freely (without any sequence). If the motor runs in the opposite direction, please swap any two wire connections.

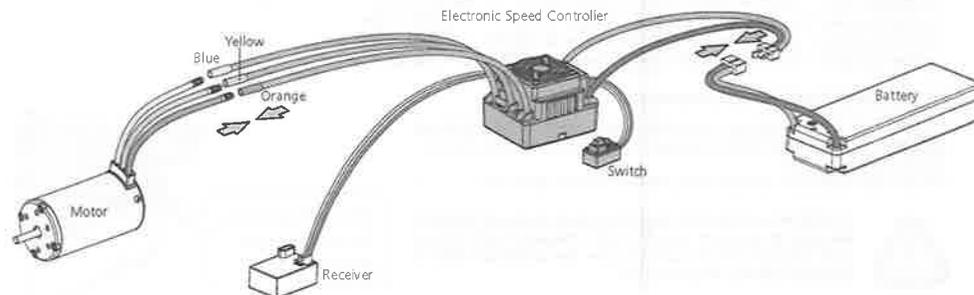

**2. Throttle Range Setting (Throttle Range Calibration)**

In order to make the ESC match the throttle range, you must calibrate it when you begin to use a new ESC, or a new transmitter, or change the settings of neutral position of the throttle stick, ATV or EPA parameters, etc. The following pictures show how to set the throttle range with a Futaba™ transmitter.

- A) Switch off the ESC, turn on the transmitter, set the direction of throttle channel to "REV", set the "EPA/ATV" value of throttle channel to "100%", and disable the ABS function of your transmitter.
- B) Hold the "SET" key and then switch on the ESC, and release the "SET" key as soon as possible when the red LED begins to flash. (*Note2*)

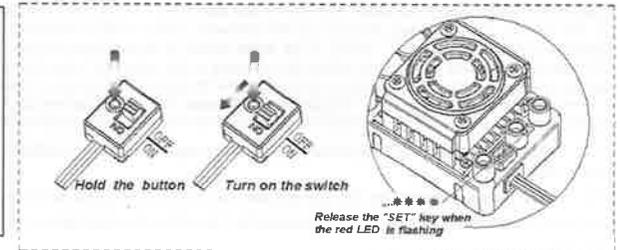

*Note2:* If you don't release the "SET" key as soon as the red LED begins to flash, the ESC will enter the program mode, in such a case, please switch off the ESC and re-calibrate the throttle range again from step A to step D.

- C) Set the 3 points according to the steps shown in the pictures on the right side.

**1) The neutral point**

Move the throttle stick at the neutral point, and then click the SET key, the green LED flashes 1 time.


**2) The end point of forward direction**

Move the throttle stick at the end point of forward direction, and then click the SET key, the green LED flashes 2 times.

**3) The end point of backward direction**

Move the throttle stick at the end point of backward direction, and then click the SET key, the green LED flashes 3 times.

- D) Throttle range is calibrated; motor can be started after 3 seconds.

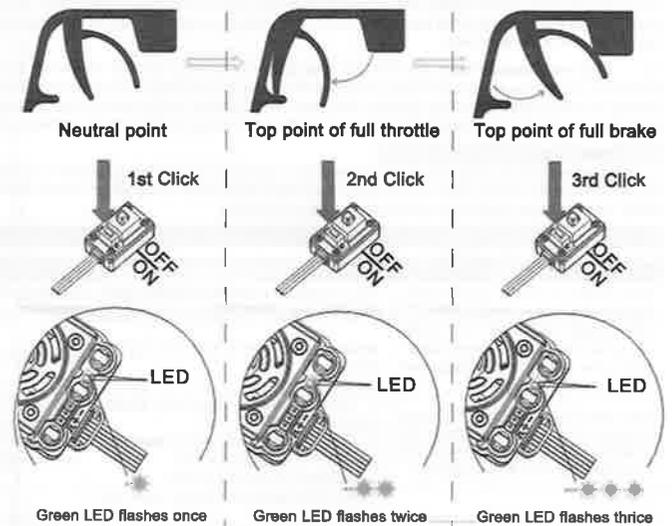

**3. Check LED Status in Normal Running**

- ▶ When the throttle stick is in the neutral range, neither the Red LED nor the Green LED lights up.
- ▶ When the car moves forward, the Red LED solidly lights; the Green LED also lights up when the throttle stick is at the top position (100% throttle).
- ▶ When the car brakes, the Red LED solidly lights; the Green LED also lights up when the throttle stick is at the bottom position and the maximum brake force is set to 100%.
- ▶ When the car reverses, the Red LED solidly lights.

**04 Programmable Items List** (The *italics* texts in the following form are the default settings)

Programmable Items	Programmable Value								
	1	2	3	4	5	6	7	8	9
1. Running Mode	Forward with Brake	<i>Forward/Reverse with Brake</i>	Forward and Reverse						
2. Drag Brake Force	0%	5%	10%	20%	40%	60%	80%	100%	
3. Low Voltage Cut-Off Threshold	Non-Protection	2.6V/Cell	2.8V/Cell	<i>3.0V/Cell</i>	3.2V/Cell	3.4V/Cell			
4. Start Mode(Punch)	Level1	Level2	Level3	Level4	<i>Level5</i>	Level6	Level7	Level8	Level9
5. Max Brake Force	25%	50%	75%	100%	Disabl e				

**1. Programmable Values**

1.1. **Running Mode:** In "Forward with Brake" mode, the car can go forward and brake, but cannot go backward, this mode is suitable for competition; "Forward/Reverse with Brake" mode provides backward function, which is suitable for daily training.

**Note: "Forward/Reverse with Brake" mode uses "Double-click" method to make the car go backward.** When you move the throttle stick from forward zone to backward zone for the first time (The 1<sup>st</sup> "click"), the ESC begins to brake the motor, the motor speeds down but it is still running, **not completely stopped**, so the backward action is NOT happened immediately. When the throttle stick is moved to the backward zone again (The 2<sup>nd</sup> "click"), if the motor speed is slowed down to zero (i.e. stopped), the backward action will happen. The "Double-Click" method can prevent mistakenly reversing action when the brake function is frequently used in steering.

By the way, in the process of braking or reversing, if the throttle stick is moved to forward zone, the motor will run forward at once.

"Forward/Reverse" mode uses "Single-click" to make the car go backward. When you move the throttle stick from forward zone to backward zone, the car will go backward immediately. This mode is usually used for the Rock Crawler.

1.2. **Drag Brake Force:** Set the amount of drag brake applied at neutral throttle to simulate the slight braking effect of a neutral brushed motor while coasting.

1.3. **Low Voltage Cut-Off:** The function prevents the lithium battery pack from over discharging. The ESC detects the battery's voltage at any time, if the voltage is lower than the threshold for 2 seconds, the output power will be cut off, and the red LED flashes in such a way: "☆-, ☆-, ☆-".

1.4. **Start Mode (Also called "Punch"):** Select from "Level1" to "Level9" as you like. Level1 has a very soft start effect, while level9 has a very aggressive start effect. From Level1 to Level9, the start force is increasing. Please note that if you choose "Level7" to "Level9" mode, you must use good quality battery with powerful discharge ability, otherwise these modes cannot get the burst start effect as you want. If the motor cannot run smoothly (that means the motor is trembling), it may caused by the weak discharge ability of the battery, please choose a better one or a softer gear ratio.

1.5. **Maximum Brake Force:** The ESC provides proportional brake function. The brake force is related to the position of the throttle stick. Maximum brake force refers to the force when the throttle stick is located at the end point of the backward zone. A very large brake force can shorten the brake time, but it may damage the gears. The "Disable" option inhibits the inherent brake function of the speed controller. When this option is selected, the brake function is realized by a traditional mechanical disc-brake system driven by a servo.

**2. Reset All Items To Default Values**


At any time when the throttle is located in neutral zone (except in the throttle calibration or parameters program process), hold the "SET" key for over 3 seconds, the red LED and green LED will flash at the same time, which means each programmable item has been reset to its default value. It needs to be restarted to complete the whole process.

**05 TROUBLE SHOOTING**

Trouble	Possible Reason	Solution
After power on, motor doesn't work, and the cooling fan doesn't work	The connections between battery pack and ESC are not correct	Check the power connections Replace the connectors
After power on, motor can't work, but emits "beep-beep-, beep-beep-" alert tone. (Every "beep-beep-" has a time interval of 1 second)	Input voltage is abnormal, too high or too low	Check the voltage of the battery pack
After the ESC was powered on and finished LiPo cells detection (the GREEN LED flashed N times), and then the RED LED flashed rapidly.	1. The ESC didn't detect any throttle signal. 2. The neutral throttle value stored on your ESC is different from the value stored on the transmitter.	1. Check if the throttle wire is reversely plugged in or in the wrong channel and if the transmitter is turned on. 2. Re-calibrate the throttle range after you release the throttle trigger to the neutral position.
The motor runs in the opposite direction when it is accelerated	1. The (ESC-to-motor) wiring order was incorrect. 2. Your chassis is different from popular chassis.	Swap any two wire connections between the ESC and the motor.
The motor suddenly stops running while in working state	The throttle signal is lost The ESC has entered the Low Voltage Protection Mode or Over-heat Protection Mode	Check the transmitter and the receiver Check the signal wire from the throttle channel of your receiver Red LED flashing means Low Voltage. Green LED flashing means Over-heat
The LED program card kept display 3 short lines (- - -) after you connected it to your ESC.	The programming card/box was connected to the ESC via the throttle control cable (Rx cable).	It is wrong to use the Rx cable to connect programming card/box. The programming port of this ESC is also the fan port, so please connect the ESC and programming card/box by plugging the programming cable into the fan port.
The vehicle could run forward (and brake), but could not reverse.	1. The throttle neutral position on your transmitter was actually in the braking zone. 2. Set the "Running Mode" improperly. 3. The ESC was damaged.	1. Re-calibrate the throttle neutral position. No LED on the ESC will come on when the throttle trigger is at the neutral position. 2. Set the "running mode" to "Forward/Reverse with Brake". 3. Contact the distributor for repair or other customer services.
The car ran forward/backward slowly when the throttle trigger was at the neutral position.	1. The neutral position on the transmitter was not stable, so signals were not stable either. 2. The ESC calibration was not proper.	1. Replace your transmitter 2. Re-calibrate the throttle range or fine tune the neutral position on the transmitter.

**06 Program The ESC**

**1. Program the ESC with the SET button on the ESC**

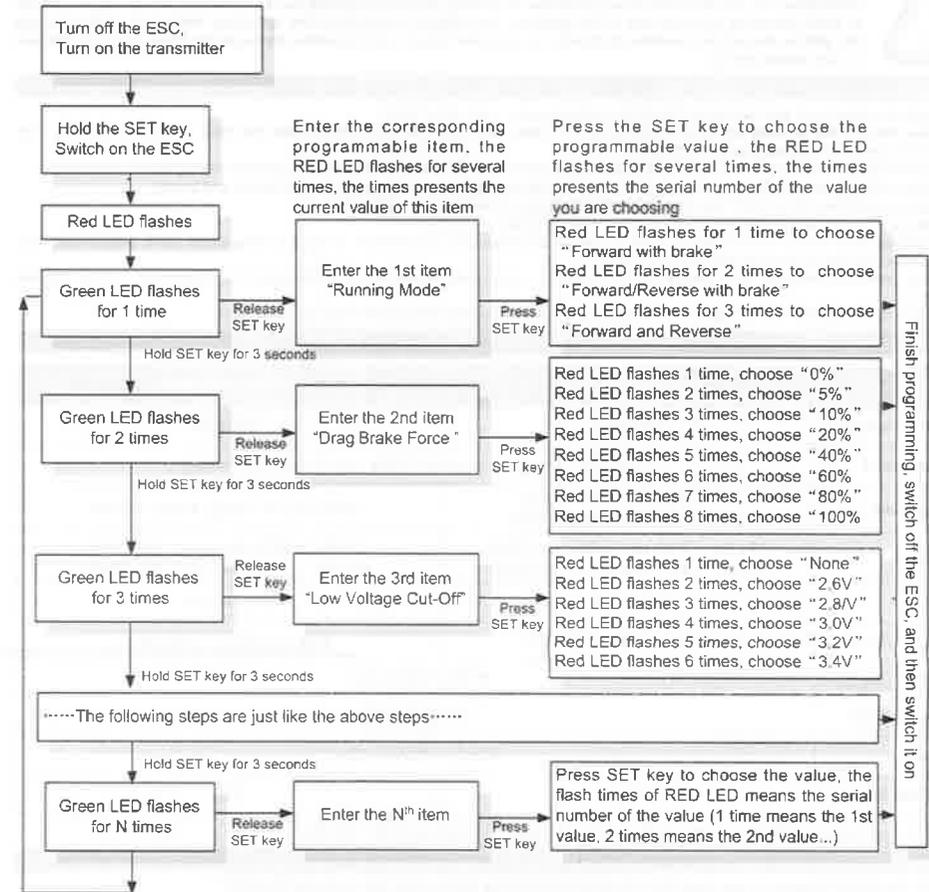

**Note:**

- In the program process, the motor will emit "Beep" tone when the LED is flashing.
- We use a long time flash and long "Beep---" tone to represent number "5" for easily identify the items of the big number.
  - "A long time flash" (Motor sounds "B---") = the No. 5 item
  - "A long time flash + a short time flash" (Motor sounds "B---B") = the No. 6 item
  - "A long time flash + 2 short times flash" (Motor sounds "B---BB") = the No. 7 item
  - "A long time flash + 3 short times flash" (Motor sounds "B---BBB") = the No. 8 item
  - "A long time flash + 4 short times flash" (Motor sounds "B---BBBB") = the No. 9 item

**2. Program the ESC with the LED program box**

The Program Card is optional equipment which needs to be purchased separately. It has 3 digital LEDs to display the programmable items' number and the options' number. (Please refer to the user manual of the program card for detail info)



The Rx wire of the ESC (for connecting receiver) CANNOT be used to connect with the LED Program Card. Please only use the special port between the terminals ABC to connect with the Program Card.

