 
 


1/10th 4WD Electric Power R/C DESERT TRUCK



Specifications:

LENGTH	WIDTH	HEIGHT	WHEEL BASE	WHEEL TEACK	GROUND CLEARANCE	DIAMETER OF WHEEL	WIDTH OF WHEEL	GEAR RATIO	SERVO	WEIGHT
510mm	315mm	200mm	355mm	255mm	50mm	140mm	55mm	1:10.9	15kg	2900g


Spare Part

H98001-Chassis 	H98002- Battery/Receiver Case 	H98003- Motor Cover 	H98004-Front Bumper 	H98005 - Wheelie Wheel Mount 
H98006 -Wheelie Wheel Mount 	H98007 - Wheelie Wheel 	H98008 - Solid Plate 	H98009-Rear Chassis Plate 	H98010-Front Chassis Plate 
H98011 - ESC Mount 	H98012-Motor Mount 	H98013-Rod End Pin 	H98014- Shock Tower 	H98015- Front Body Post 
H98016-Body Post 	H98017-Steering Mount L/R(Option) 	H98018-Steering Mount 	H98019 - Front Lower Suspension Arm L/R 	H98020-CVA Shafts 
H98021-Shock Absorber (Short) 	H98022- Ball Head Of Front Shock (5MM) 	H98023-Steering Sway Arm Assembly 	H98024 - LED Light Clip (Optional)  Hex 2*6	H98025- Servo Saver Assembly 
H98026-Servo Link 	H98027 -Pad 	H98028 -Steering Post 	H98171 - Drive Gear 	H98030 - Battery Strap 250mm 
H98031- Front Gear Box Housing 	H98032-Radio Tray Holder 	H98033- Differential Box (With 2 Rings & Steel Washers) 	H98034 - Diff.Main Gear Metal(64T) 	H98035-Motor Gear Metal (19T) 

  Spare Part

H98036- Diff Gear Complete 	H98173-Drive Gear 	H98038- Crown Gear(38T) (Coper infiltration) 	H98039- Diff.Pinions+ Bevel Gears+Pin 	H98040- Universal Joint Cup C 
H98172-Universal Joint Cup B+Grub Screw 	H98042-Servo Arm 	H98043-Ball Bearing $\Phi 8*5*2.5$ 	H98044-Ball Bearing $\Phi 15*10*4$ 	H98045-Ball Bearing $\Phi 10*5*4$ 
H98046-Oil Bearing $\Phi 5*10*4$ 	H98047-Oil Bearing $\Phi 15* \Phi 10*4$ 	H98048 - Servo Washers $\Phi 3*8*0.8mm$ 	H98049-Suspension Arm 	H98050-Centre Dogbone 
H98051-3*44mm Front Suspension Arm Pin A 	H98052-Ball Head Screws 5,8mm 	H98053-Nylon Nut M3 	H98054- Grub Hex, Screw M4*4 	H98055- Flange M4 Lock Nut 
H98056-Steering Shaft Bush 	H98057-Wheel Hex 	H98058-Shock Pivot Ball 	H98090-Shock Pivot Ball 	H98079-Shim For Servo Mount 
H98091-3*5.5*2 Shim 	H98059-E-Clip ($\Phi 2.5$) 	H98060- E-Clips $\Phi 4mm$ 	H98061-Body Clip 	H98062-Pin 2*10mm 
H98063- Cap Head Hex Self-Tapping Screw 3*8 4P 	H98064- Cap Head Hex Self-Tapping Screw 3*12 4P 	H98065- Cap Head Hex Self-Tapping Screw 3*14 4P 	H98066- Cap Head Hex Machine Screw 2*6 8P 	H98067- Cap Head Hex Machine Screw 3*10 8P 

 
Spare Part

<p>H98068- Cap Head Hex Machine Screw 3*16 6P</p> 	<p>H98069-Cap Head Hex Machine Screw 3*25 4P</p> 	<p>H98070-Round Head Self-Tapping Screw 2*10 5P</p> 	<p>H98071 - Countersunk Screw 3*6 5P</p> 	<p>H98078- Column Head Hex. Screw 3*10 10P</p> 
<p>H98072-Column Head Hex. Screw 3*12 10P</p> 	<p>H98073-Flat Head Hex Machine Screw 3*10 4P</p> 	<p>H98074-Flat Head Hex Self-Tapping Screw 3*8 10P</p> 	<p>H98075-Flat Head Hex Self-Tapping Screw 3*10 12P</p> 	<p>H98076- Column Head Machine Screw 3*45 3P</p> 
<p>H98077-Front Lower Suspension Arm Screws 3*30 4P</p> 	<p>H98080-Brushless Motor 3300KV (Optional)</p> 	<p>H98081- Servo 15kg</p> 	<p>H98082-Lipo Battery 7.4V 3500mAh (Optional)</p> 	<p>H98083 - Brushles ESC (MAX10 80A)</p> 
<p>H98084- Wheel Rim (Option)</p> 	<p>H98085-Tire+Inside Sponge L/R(Optional)</p> 	<p>H98086-Wheel Complete L/R(Optional)</p> 	<p>H98087- Wheel Rim (Option)</p> 	<p>H98088-Tire+Inside Sponge L/R(Optional)</p> 
<p>H98089Wheel Complete L/R(Optional)</p> 	<p>H98092-Front Shock Main Axle 53mm</p> 	<p>H98093-Parts for Shock</p> 	<p>H98094-O-ring for Shock</p> 	<p>H98095-O -ring for Shock Cap</p> 
<p>H98096-Shock Ball Holders</p> 	<p>H9801BL-Body blue</p> 			


Upgradable Optionals

<p>P980001- Slidid Plate</p> 	<p>P980002-ESC Mount</p> 	<p>P980003- Shock Tower</p> 	<p>P980004-Steering Mount L/R(Optional)</p> 	<p>P980005-Steering Mount</p> 
<p>P980006 - Front Lower Suspension Arm</p> 	<p>P980007- Steering Sway Arm Assembly</p> 	<p>P980008 -Aluminum Body Post -4P (truck)</p> 	<p>P980009 - Radio Tray Holder</p> 	<p>P980010-Aluminum Nut M3</p> 
<p>P980011-Aluminum Nut M4</p> 	<p>H98012-Wheel Hex</p> 			


1. Differential Assembly

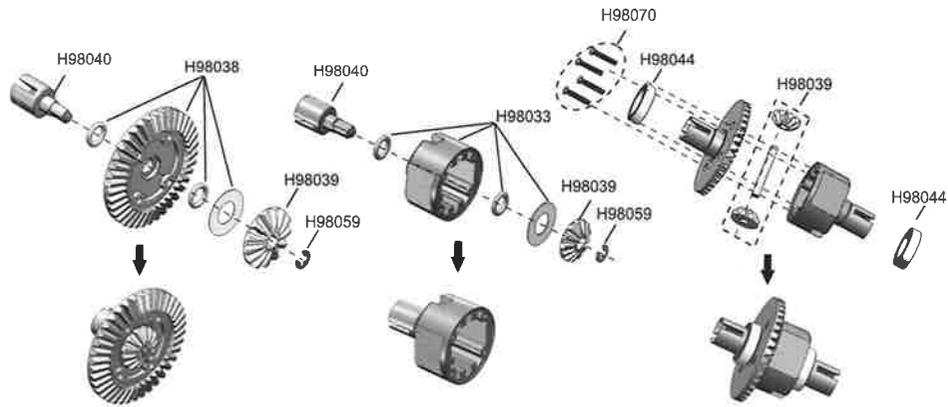


2. Front Gear Box Assembly

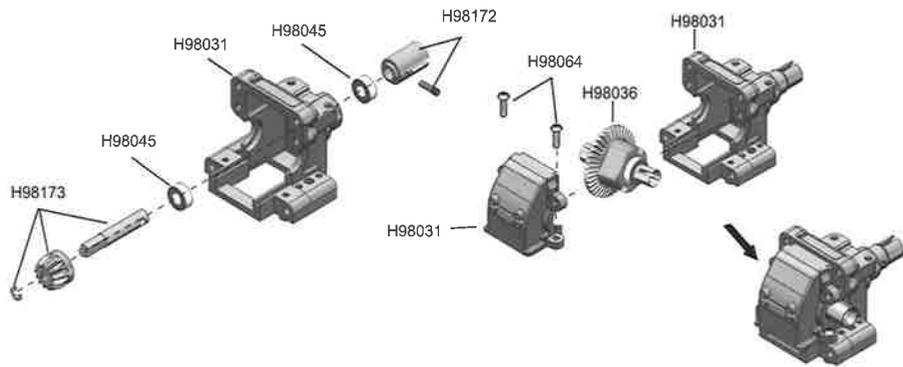


3. Rear Gear Box Assembly

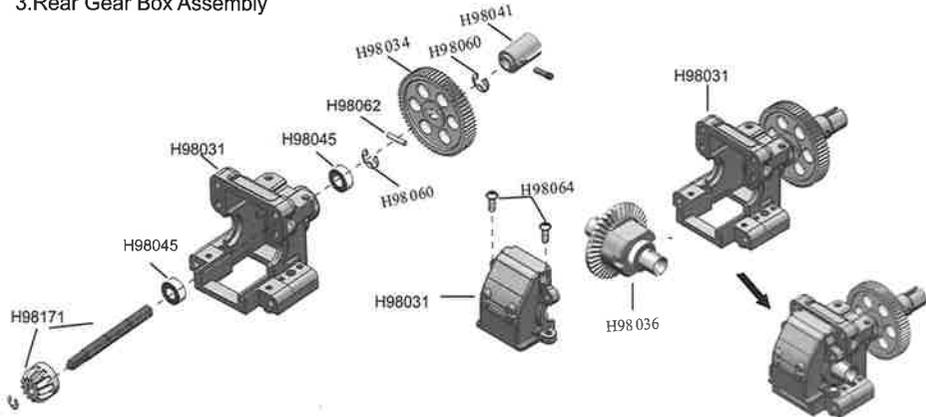


4. Front Shock Tower

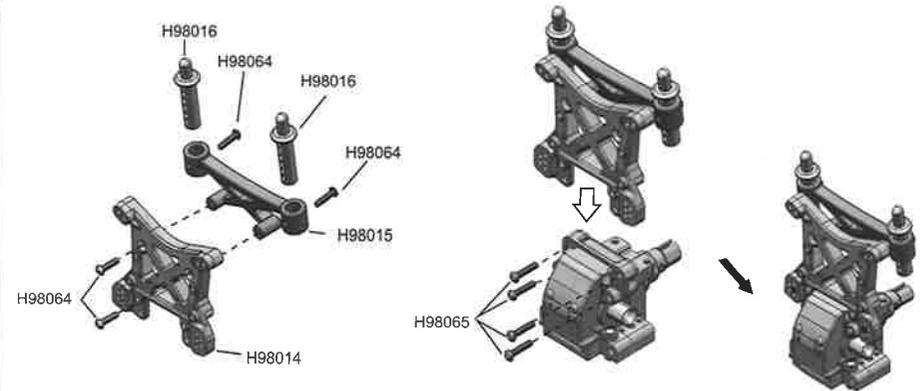


5. Rear Shock Tower

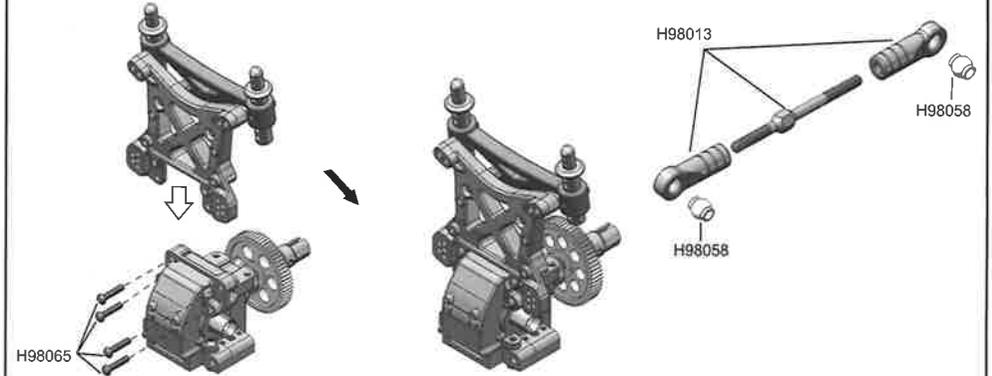


6. Suspension(1)

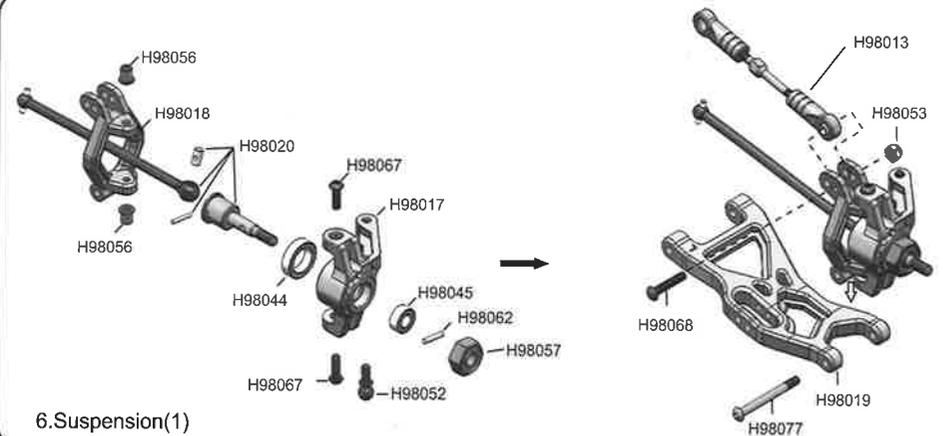

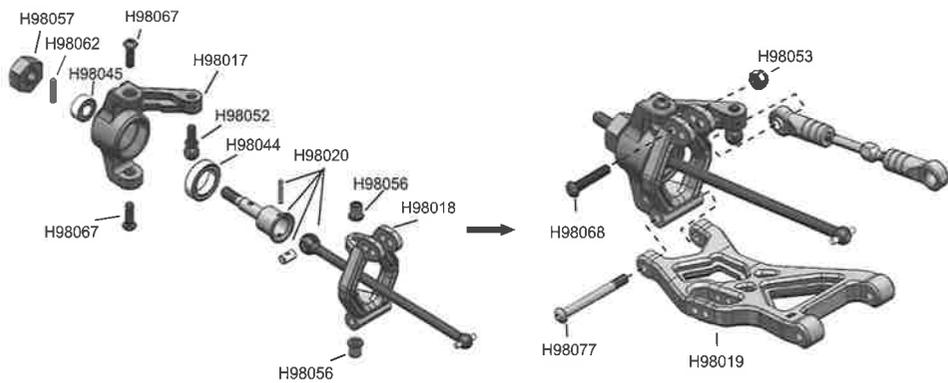

7. Suspension(2)


8. Suspension Arm Assembly

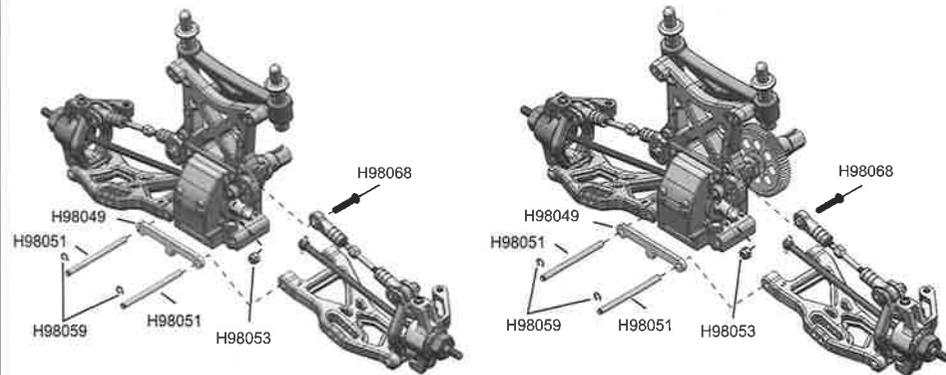


9. Shock Absorber




10. Shock Mounting

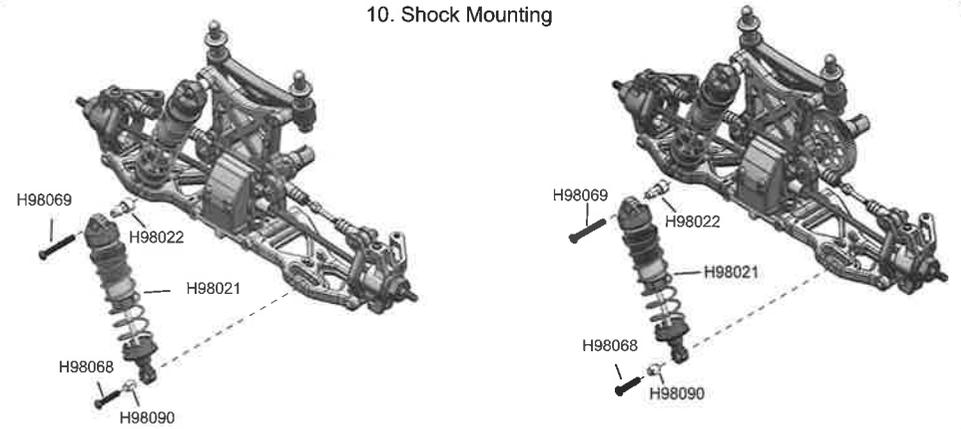


11. Servo Save Assembly

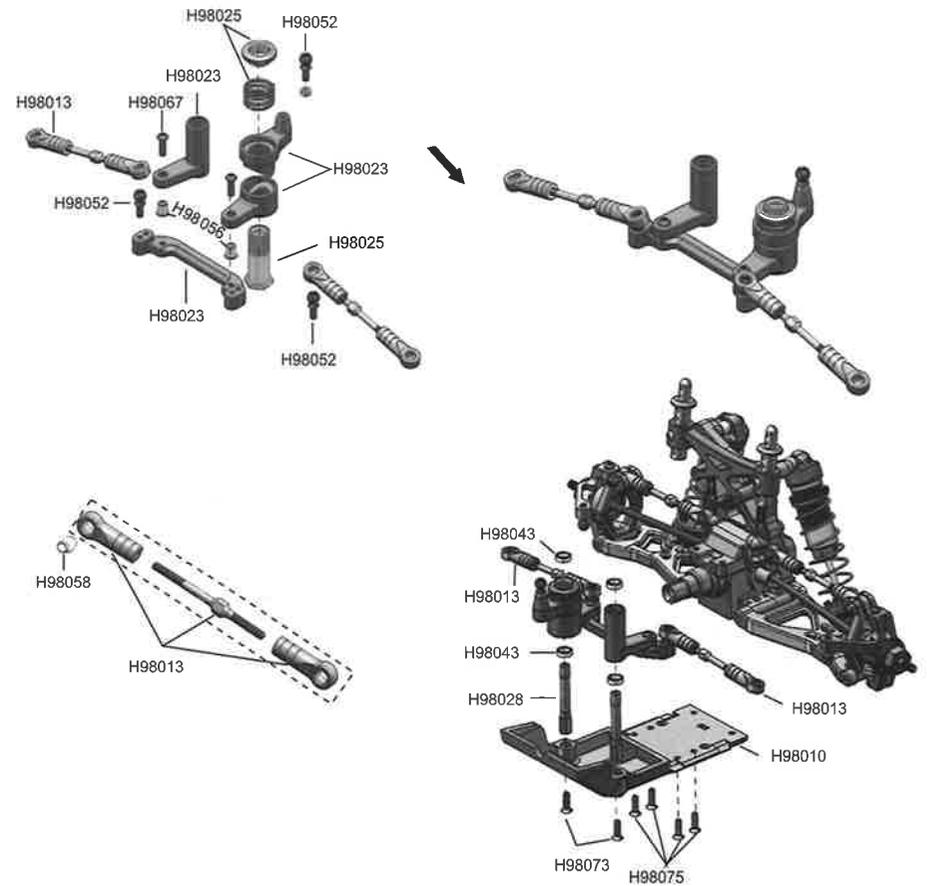


12. Bumper Mounting

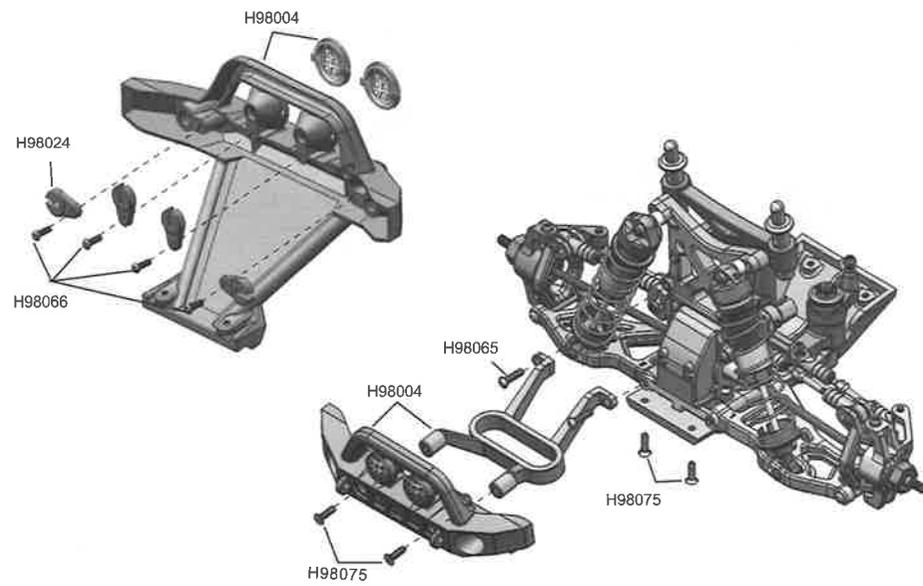


14. Wheel Lie Mounting

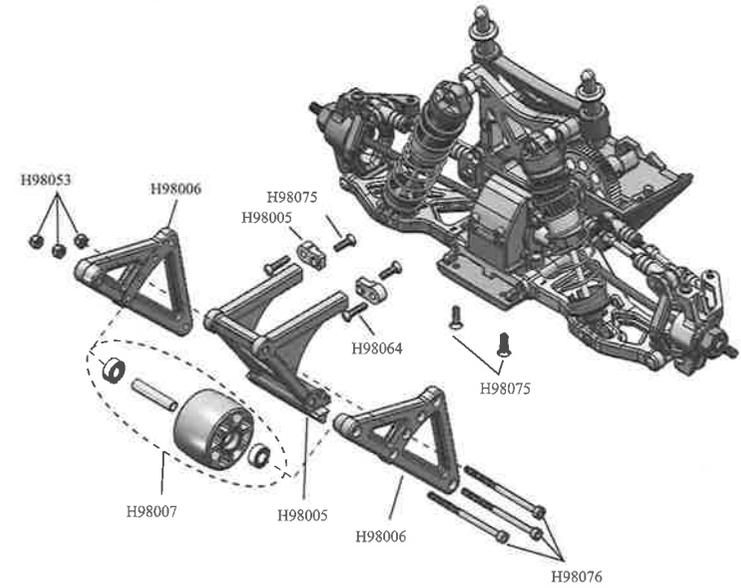


13. Rear Arm Assembly

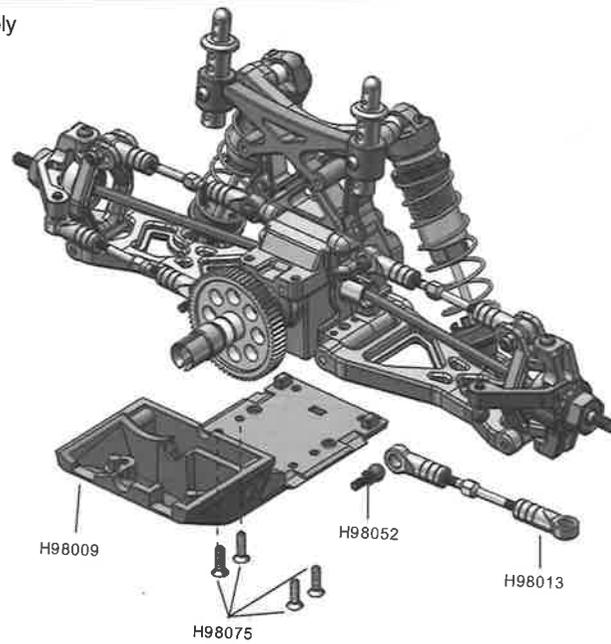


15. Motor

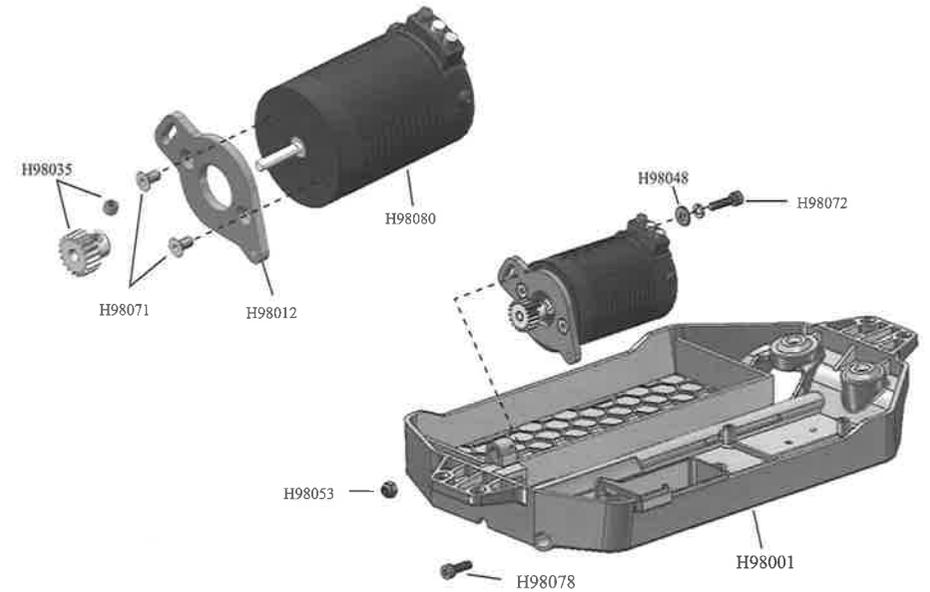


16. Rear Arm Assembly

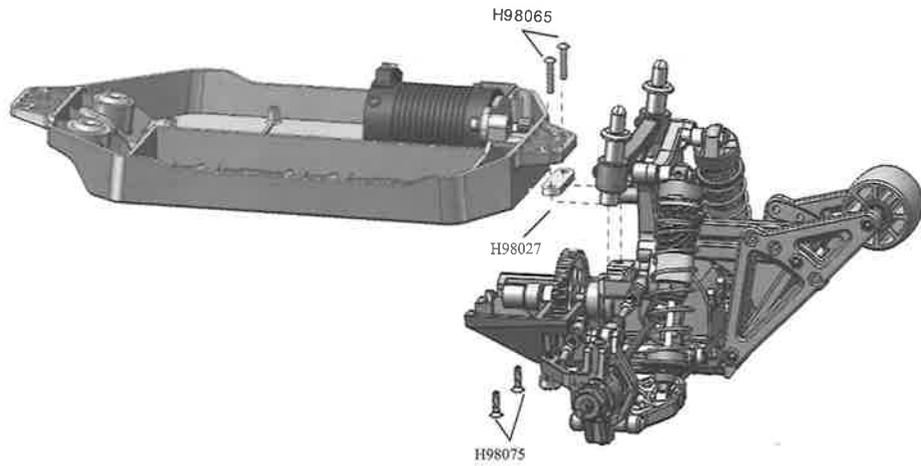


18. Mounting The Servo

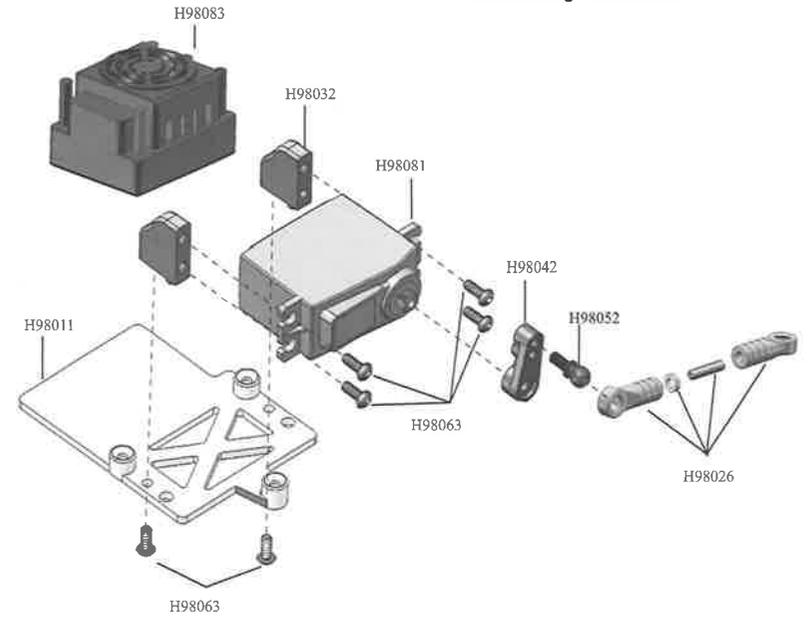


17. Front Arm Assembly

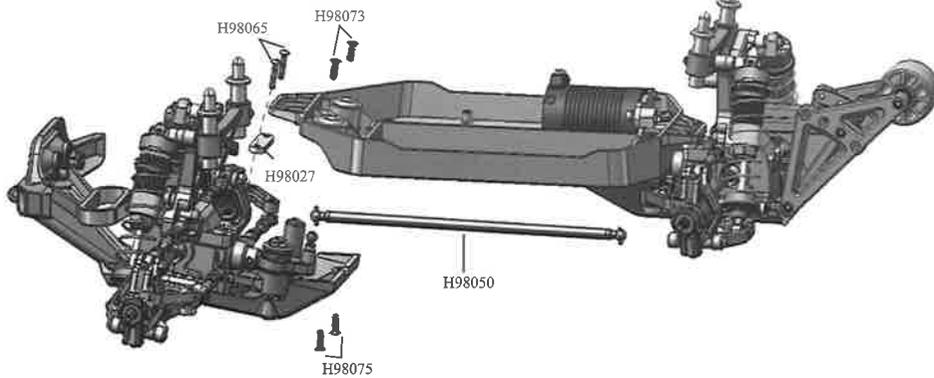


19. Lock The Electric Parts

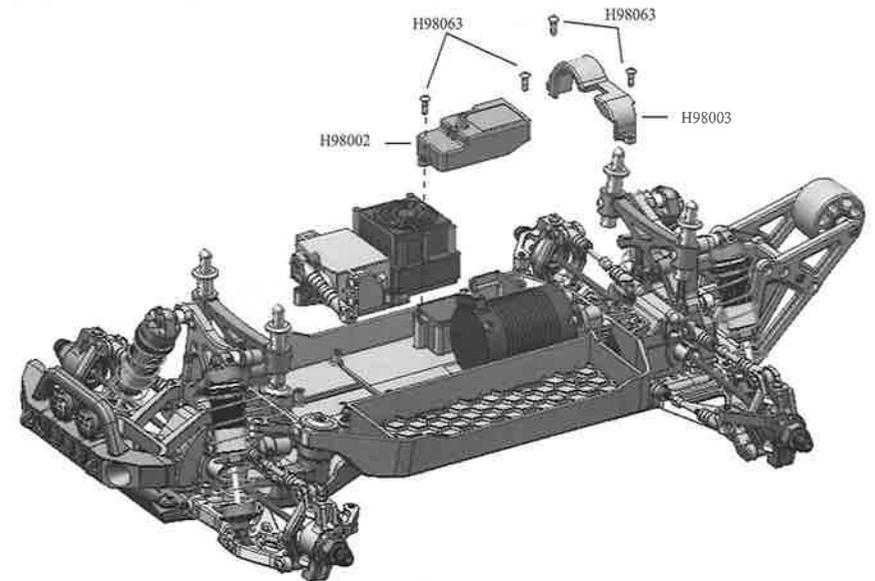



20. Battery Mounting

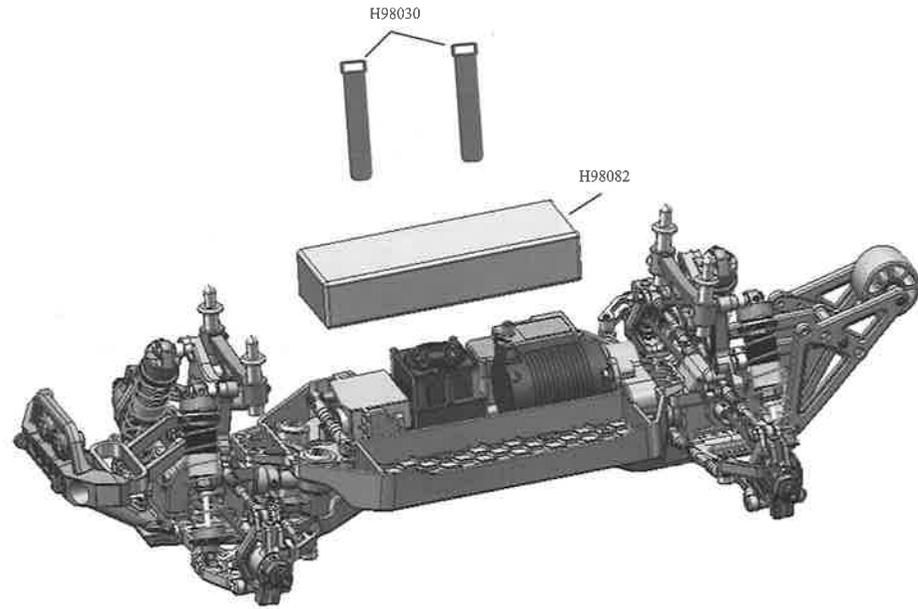

21. Wheel Mounting

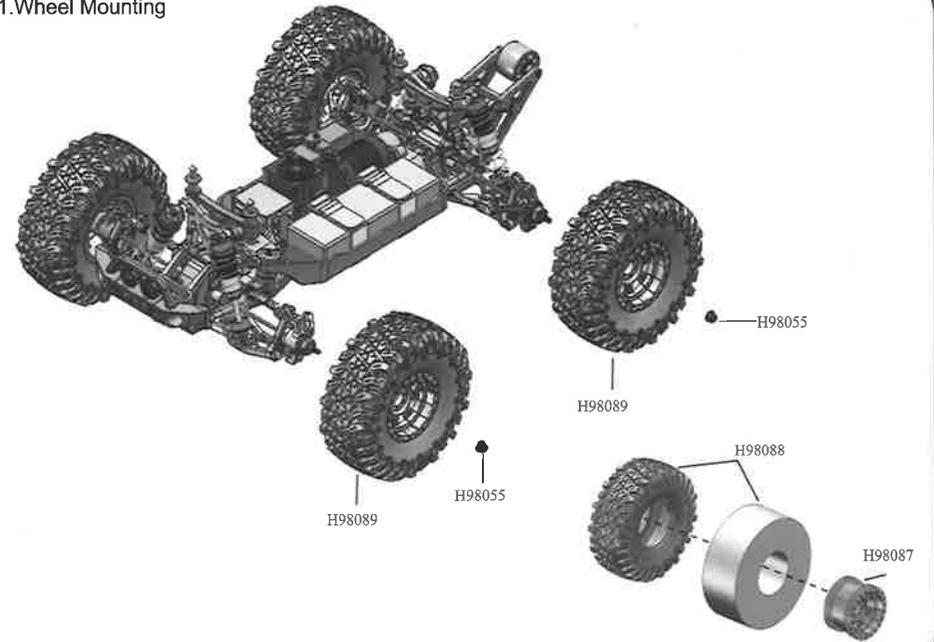

22. Wheel Mounting

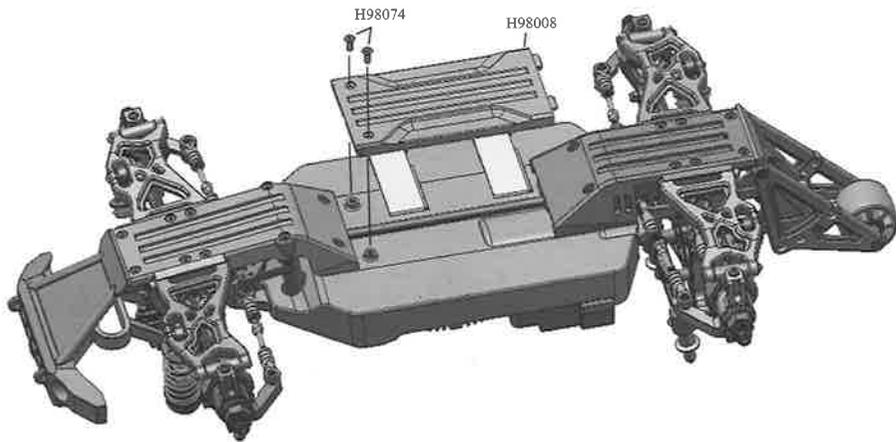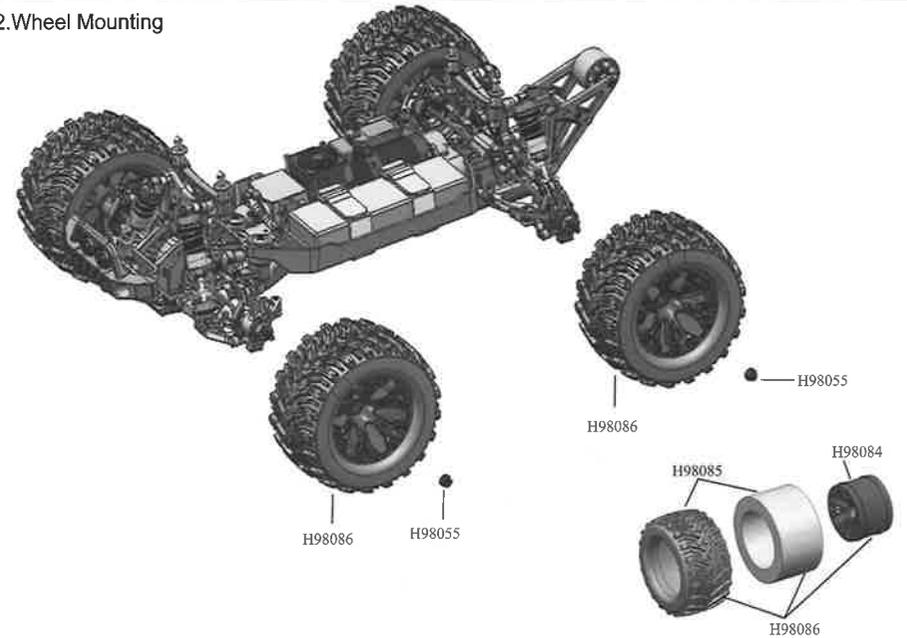

23.Body Mounting

