

User Manual

MagniLink S PREMIUM 2 - iPad

LVI America Inc.

302 Saunders Road, Suite 200 Phone: (888) 781-7811 info@lviamerica.com

Riverwoods, IL 60015, USA www.lviamerica.com

LVI Low Vision International

 Verkstadsgatan 5
 Tel: +46 470-727700
 info@lvi.se

 SE-352 46 Växjö
 Faks: +46 470-727725
 www.lvi.se



Table of Contents

1	А	bout LVI	5
2	Ir	ntroduction to the MagniLink S	6
3	Ir	nformation	8
	3.1	Reuse, installation and maintenance	8
	3.2	Cleaning	8
	3.3	Safety information	8
4	U	npacking	10
	4.1	Packaging	11
5	А	ccessories	12
6	Н	lardware	14
	6.1	Installation of hardware	14
	6.2	Installation of docking station	15
		Using the hardware	
7	N	1agniLink Viewer	19
	7.1	Minimum system requirements	19
	7.2	Recommended system requirements	19
	7.3	Installation of software	19
	7.4	Activate driver	21
	7.5	Using the software	22
8	V	Vorking with the reading camera	45
9	T	roubleshooting	46
1() T	echnical information	47
1	1 D	eclaration of Conformity	48





1 About LVI

LVI Low Vision International AB was founded in 1978 and is one of the world's leading manufacturers of magnifying TV- and computer systems for visually impaired. New products are developed in close cooperation with users and professional personnel of vision rehabilitation. LVI is a Quality System Certified ISO 9001 and Environmental System Certified ISO 14001 company.

The information in this manual has been carefully checked and is believed to be accurate. However, LVI assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will LVI be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual. In the interest of continued product development, LVI reserves the right to make improvements in this manual and the products it describes at any time, without notice or obligation.



2 Introduction to the MagniLink S

Thank you for choosing this video magnifier. We aim to ensure that you are completely satisfied with your choice of supplier and reading aid.

The MagniLink S is a portable camera system with autofocus, which can be connected to a computer or directly to an external monitor. The system is controlled via a keyboard and/or control box. MagniLink S is available in a number of different models. Choose model in the following steps:





Choose reading camera HD or FHD.

Model	Camera
MLS-HD-2	HD (720p)
MLS-FHD-2	FHD (1080p)

Choose among the following accessories.

Product code	Accessory	
A Text To Speech for PC		
В	Text To Speech for Mac	

CE	The systems complies with all CE certification requirements for medical devices in accordance with EU regulation 2017/745.



3 Information

3.1 Reuse, installation and maintenance

The device may only be technically overhauled and prepared by an authorized company. Re-use may only be carried out after appropriate inspection and cleaning / disinfection.

3.2 Cleaning

Before equipment cleaning and maintenance note:

- Disconnect the device from the power supply before cleaning.
- Use a slightly damp (not wet) cloth and a cleaning / disinfectant agent intended for monitors and computers.
- Do not allow any liquids to enter the device.

3.3 Safety information

The reading aid is only intended for indoor use and must be used in accordance with the following safety instructions.

- Use only the power adaptor supplied with MagniLink S. If the wrong type of adaptor is used for operation of MagniLink S, this can cause damage to the system.
- Units such as HDMI monitors and/or computers that are to be connected to the system must comply with the appropriate safety regulations for their country of use.
- The product contains a neodymium magnet. This is a potential risk for a user with a pacemaker. If the magnet gets too close, its magnetic field can interfere with the operation of the pacemaker.
- Never turn on or use the product if it has been exposed to water, rain or other liquids. Pull out the USB cable and allow trained service personnel to carry out an inspection of the product before it is used again.
- Place the power cord in such a way that you can neither trip over it or that crush damages can occur.
- If the product is moved from the cold into a warm room, condensation (moisture) can form inside the unit or on the camera lens. To prevent problems with condensation, the apparatus should be installed in the room at least 30 minutes prior to usage.



- If the system requires cleaning, pull out all cables and use a slightly damp (not wet) cloth. Use only water or a cleaning agent that is intended for monitors and computers.
- Do not rely 100 per cent on the results of an OCR conversion; the OCR engine can misinterpret the text. This is particularly important to bear in mind when processing sensitive information such as a medical prescription.
- Make no further adjustments, even if the product does not function normally after following the functional descriptions. Pull out the USB cable and contact service personnel or the product distributor. Only use spare parts that are specified by LVI

If in doubt, contact your supplier.

Warning



MagniLink S is supplied packed in a plastic bag. To avoid risk of suffocation, keep the bag out of the reach of children and infants.



4 Unpacking

The system is supplied in a box with the following contents:



- Reading camera
- Removable USB/HDMI module
- USB cables
- Case
- USB memory stick with software
- Polishing cloth
- User Guide
- Power adaptor
- HDMI to HDMI cable

Check first that the box has no damage to its exterior. In the event of damage, contact the delivery company and file a notification of damage.

Open the box and take out the MagniLink S; remove the white packaging. For further information see Installation.



4.1 Packaging

The packaging consists of the following packaging material (LVI recommends that the packaging be kept in case you have to return the system or you need to move it):

- Packing material (EPE)
- Box (corrugated cardboard)
- Polyethylene (LDPE4)

For sorting and collection of packaging material, please call the packaging collection customer service department for information on the rules that apply in your municipality.



5 Accessories



Larger external control box (MLV-A110A).



MagniLink Reading Table (MLRT), portable reading table.





LVI Monitor 19" (MLS-A103) and 23" (MLS-A104).



MagniLink Docking Station 2 (MLS-A108) with table clamp.



Text To Speech for PC (TTS-PC), $\,$ Mac (TTS-MAC) or Chromebook (TTS-CHROME).




6 Hardware

6.1 Installation of hardware



Open the camera's arm and pull out the camera's supporting legs. It is not possible to manipulate the camera's arm until the supporting legs have been extended.

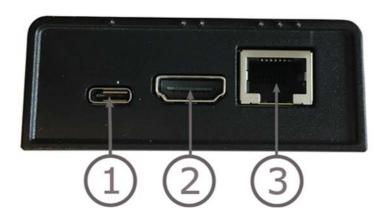

The USB/HDMI module has several connection options.

1. USB connection

In addition to transferring images to a computer, the USB connection is used to provide power to the system.

2. HDMI connection

Here the camera can be connected to a monitor that supports HDMI or DVI.




3. External control panel

An external control panel can be connected via this input. If the camera is linked to a docking station, the control panel must be connected before you attach the USB connection.


6.2 Installation of docking station

If you bought a MagniLink Docking Station, follow the instructions below to install it.

A MagniLink Docking Station consists of a camera holder and a reading table, plate or table clamp. If it is the variant with a table clamp, fasten it to the table.

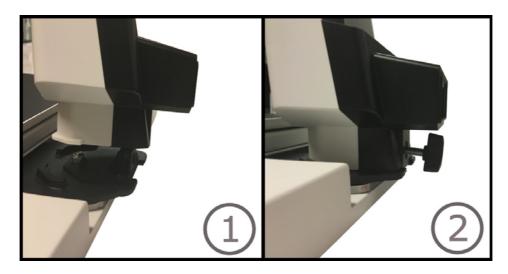

- 1 Place the holder in the reading table, plate or table clamp.
- 2 Fasten the holder with the screw.

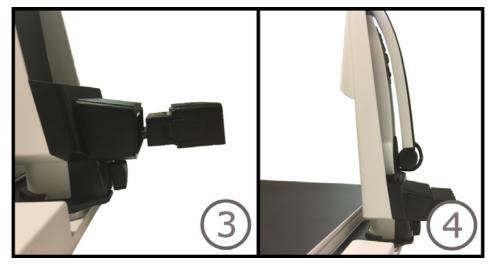


- 3. Remove the USB / HDMI module from the camera and insert it into the holder.
- 4. Place the camera in the holder.



6.3 Using the hardware

6.3.1 Control box

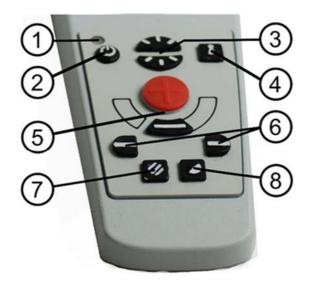

1. LED

A green light indicates that the system is on. A flashing green light means that the system is starting up. A slowly flashing yellow light indicates standby. A red light indicates that something is wrong in the system. See the chapter on Troubleshooting page 46.

2. Power on/off

Press to start or shut down the system.

3. Lighting configuration

Used to configure the light intensity in order to optimize reading conditions. Press the upper half to increase the light intensity and the lower half to decrease it. For systems that have LED lighting, the intensity is adjusted by holding down the button (7).

4. Autofocus on/off

Press the button once to lock the focus. This can be used when you wish to write by hand. Autofocus is not affected by the pen or your hand. Press the button a second time, to reactivate autofocus.

5. Zoom control

Used to set the zoom. To reduce the zoom, press the lower key (minus) and to increase the zoom, pressure the upper key (plus).



6. Reference line/Bar

Adjust the position of the reference line. Press the right-hand button to move the horizontal line down. Hold the button in to change the reference line to vertical and move it to the left. The reference line then becomes a horizontal bar which diminishes the viewing area. To make the bar vertical, press the button again. The left button gives the opposite result.

7. Picture mode

Press the button to switch the picture mode between natural colours and grey scale.

Lighting adjustment

Hold the button down to temporarily enable adjustment of the lighting via the lighting configuration (3). When the lighting configuration (3) is used to adjust the lighting, there is no switching between colour and grey scale (only possible if the system has LED lighting).

Mirroring

A mirror image can be obtained by holding the button down for three seconds.

8. High contrast modes with artificial colours

Press the key to switch between the various colour combinations. **Rotation**

By holding the button down for three seconds, the image can be rotated 180 degrees.



6.3.2 Position sensor



MagniLink S is equipped with a position sensor that is used to switch between reading mode (the user points the camera down and flips the lens into place) and distance mode (the user opens the lens). The settings for both modes are automatically saved when you switch from one to the other.

Settings that are automatically saved for these modes are:

- Artificial colours
- Negative/Positive/Natural colours
- Light
- Magnification level
- Reference line/Bar
- Rotation of camera image
- Mirroring of camera image



7 MagniLink Viewer

MagniLink Viewer is a software developed for iPad. The software can display images from a MagniLink camera system and the built-in cameras. The software can control camera properties such as magnification level, artificial colours and brightness.

7.1 Minimum system requirements

- iPad with USB-C port and M1 chip or newer.
- iPadOS 17.0 or later.

7.2 Recommended system requirements


- iPad Pro 12,9" with M1-chip or newer.
- iPadOS 17.0 or later.

LVI has tested the software on several iPads with above specification without any problems, but there is no guarantee that the system will function on all iPads that comply with the specifications. LVI recommends testing the software on the iPad where the system is to be used, in order to ensure compatibility. Please look up the feature to reduce framerate and picture quality under camera settings, this to reduce any delay.


7.3 Installation of software

Enter App Store and click Search in the lower right-hand corner.



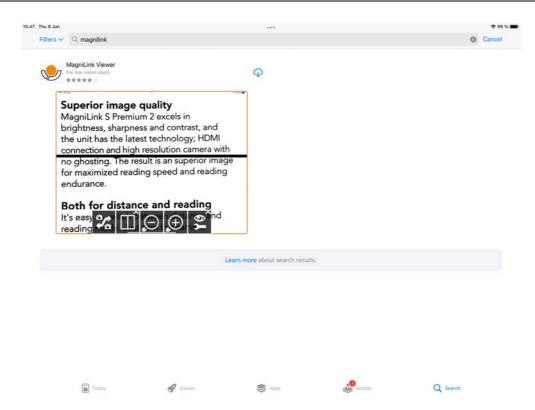


Click the download icon to install the software.

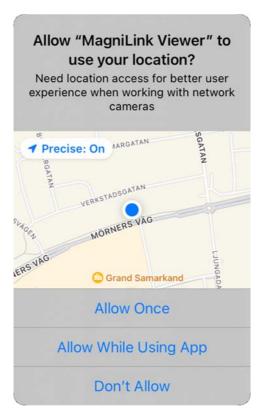

Click Allow while using the app.



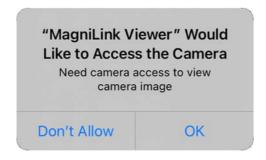

Click OK.

7.4 Activate driver

To control the camera functions, the driver MagniLink Driver must be activated. If the driver is not active, a message is displayed. By pressing "Settings" you get to the iPad's settings where you can activate the driver.



7.5 Using the software

7.5.1 Functions via menus

7.5.1.1 Camera view

The following menu is displayed when the application is started.





Switch views

Switches to the OCR view. Press and hold to switch to the Notepad view.



Change camera

Switch between the LVI camera and the front and rear cameras.



Split Mode

Opens a submenu where you can set the split mode.



Lock autofocus

Locks the autofocus mode. This can be used when you wish to write by hand. In this way, autofocus is not affected by the pen or your hand. Press the button a second time to reactivate autofocus.



Focus up

Reduce focus distance. When this function is used, autofocus is turned off.



Focus down

Increase focus distance. When this function is used, autofocus is turned off.





Lamp

Change lamp brightness. There are five modes: Off, 25, 50, 75 and 100 percent.



Switch between rear and front camera

This feature is available on iPhone and older iPads where you cannot view the two built-in cameras at the same time.



Change Image Source

Used to swap image sources (if there are more than two sources).



Change split mode

Change between vertical and horizontal split mode.



Move split left

Moves the split mode to the left.



Move split right

Moves the split mode to the right.



Decrease magnification



Increase magnification



OCR

Start OCR. When the OCR process is complete, the application switches to the OCR view and reading begins. You cannot switch using press and hold.







Opens a submenu with the following buttons.



Take picture

There is an audible click, and the image is saved. The image can then be opened in the "Images" app. The file name will be today's date and the current time.



Record video

Start recording. The application will display an icon indicating that recording is in progress. Stop recording by pressing the button again. The clip can then be opened in the "Images" app. The file name will be today's date and the current time.



Notepad

Opens the camera image in the notes tool.



Video settings

Opens a submenu with the following buttons.



Whole image

Switch between full image and cropped image. In full image, the image is scaled so that the entire image is displayed. In cropped image, the image is scaled so that it covers the entire screen.



Switch natural colours

Switch between natural colours and grey scale.



Switch artificial colours

Switch between artificial colours. Press and hold to switch back.



Reduce brightness/contrast





Increase brightness/contrast



Mirror the camera image

Press again to reverse the mirror image.



Rotate the camera image

Rotates the camera image clockwise. Press and hold to rotate anti-clockwise.



Reference line/vertical bar left/up

Adjusts the position of the reference line. Press the button to move the reference line to the left. Hold the button in to change the reference line to horizontal and move it upwards. The reference line then becomes a vertical bar, which diminishes the viewing area. To make the bar horizontal, press the button again.



Reference line/bar right/down

Same as the previous command but in the opposite direction.



Settings

Opens the Settings view.



7.5.1.2 OCR view



The OCR view consists of three components.

- At the bottom is a menu bar with buttons.
- To the left is a list of pages that have been OCR processed previously. By clicking on a page, you can navigate to it.
- An area showing the OCR processed page. The current page number is displayed top right.



Switch views

Switches to the camera view. Press and hold to switch to the Notepad view.



Handle documents

Opens a submenu where the following alternatives are found.



Hide sidebar

Hides the list on the left where previously OCR processed pages are displayed.





Open document

From the dialog box, select the file you wish to open. It is possible to open PDF files and saved ZIP files.



Save document

A dialog box where you can choose the file format (PDF, Zip and RTF) appears. You can then choose where you want to save the file.



Remove

Remove the current page.



Notepad

Opens OCR processed pages in the notes tool.



Start reading

Start reading. Press again to stop reading.



Previous

Skip backwards in the text. Depending on which reading mode is selected, you will skip back to the previous character, word, sentence or block. Press and hold to switch to the previous page.



Next

Skip forwards in the text. Depending on which reading mode is selected, you will skip forwards to the next character, word, sentence or block. Press and hold to switch to the next page.



Text settings

Opens a submenu with the following settings.



Switch reading mode

Switch to next reading mode. The modes available are: character, row, sentence and block.





Switch display mode

Switch display mode. The display modes available are "page view", "row view", "word view", "image view", "image and word" and "image and row".



Increase font size



Reduce font size.



Image settings

Open a submenu with the following buttons.



Switch natural colours

Switch between natural colours and grey scale.



Switch artificial colours

Switch between artificial colours. Press and hold to switch back.



Increase brightness/contrast



Reduce brightness/contrast



Settings

Opens the Settings view.



7.5.1.3 Notepad view



The notes tool consists of three components.

- To the left is a list of images that have been opened previously. By clicking on an image, you can navigate to it.
- An area where you can draw, enlarge and pan through the image.
- At the bottom is a menu bar with buttons.



Switch views

Switches to the camera view. Press and hold to switch to the OCR view.



Handle documents

Opens a submenu where the following alternatives are found.



Hide sidebar

Hides the list on the left where previously OCR processed pages are displayed.





New image

Opens a new blank image that you can draw in.



Save document

A dialog box where you can choose the file format (PDF and JPEG) appears. You can then choose where you want to save the file.



Open document

From the dialog box, select the file you wish to open. It is possible to open PDF files and saved ZIP files.



Remove

Remove the current page.



Pen

Draw with a pen. Press and hold to open a dialog box where you can choose the colour and size.



Highlight

Highlight with a highlighter. Press and hold to open a dialog box where you can choose the colour and size.



Text tool

Insert text. Press and hold to open a dialog box where you can choose the colour, size and font. You can move text around after inserting. Double-click the text to change it.



Delete



Enlarge and pan in the image.



Undo





Restore

Restore after pressing undo.



Rotate

Any changes you made to the image will be removed if you rotate.



Settings

Opens the Settings view.

7.5.2 Functions via gestures

Some functions can be controlled via gestures on the tablet. Pressing and holding means keeping the fingers in place for more than half a second. It is possible to choose which gestures you want to switch off in the settings.

7.5.2.1 Camera view

Pinch Change magnification

Rotate two fingers Rotate the image

Press with two fingers on the top of the

screen

Natural colours

Swipe with two fingers vertically over the

top of the screen

Artificial colours

Swipe with two fingers vertically over the

top of the screen

Contrast

Press and hold with one finger on the top

of the screen

Start OCR



Press and hold with two fingers on the top of the screen

Start OCR (without switching views)

Press and hold with three fingers on the top of the screen

Take picture for notes tool

Press and hold with one finger on the bottom of the screen

Switch full screen

Double-click with two fingers on the bottom of the screen

Switch views

Double-click with one finger on the bottom of the screen

Hide menus

Double-click with one finger on the top of the screen

Switch camera

Press with three fingers on the top of the screen

Change split mode

Press with three fingers on the bottom of the screen

Open settings

7.5.2.2 OCR view

Pinch Change magnification

Swipe with one finger Pan through the image

Press with two fingers on the top of the

Natural colours



Swipe with two fingers vertically over the top of the screen

Artificial colours

Swipe with two fingers vertically over the top of the screen

Contrast

Double-click with one finger on the bottom of the screen

Hide menus

Double-click with one finger on the top of the screen

Hide sidebar

Double-click with two fingers on the bottom of the screen

Switch views

Swipe with two fingers vertically over the bottom of the screen

Switch reading mode

Press with three fingers on the bottom of the screen

Open settings

Press and hold with two fingers on the bottom of the screen

Change display mode



7.5.3 Functions via the keyboard

You can connect to a USB or Bluetooth keyboard and control some of the application's functions via the keyboard.

The shortcut commands can be changed in Settings. Below are the standard settings for shortcut commands.

7.5.3.1 General

fn + F1 Natural colours

fn + F2 Positive picture with increased contrast

Artificial colours; White/Black, Yellow/Black, Green/Black, Red/Black, Yellow/Blue, White/Blue Press F2 to toggle through the different colours. (Shift

+ fn + F2 toggles backwards.)

fn + F3 Negative picture with increased contrast

Artificial colours; Black/White, Black/Yellow, Black/Green, Black/Red, Blue/Yellow, Blue/White Press F3 to toggle through the different colours. (Shift

+ fn + F3 toggles backwards.)

Arrow up Zoom in

Arrow down Zoom out

Arrow left Decrease brightness

Arrow right Increase brightness

Cmd + , Open the preferences dialog

This key combination is the standard way to open the

preferences dialog in a Mac application.

Option + H Hide menus

V Switch between camera view and text view

If a text has been OCR-processed, this command switches between camera view and text view.



7.5.3.2 Camera view

Option + Arrow left Guiding line left/up

Option + Arrow right Guiding line right/down

Option + R Rotates the camera picture clockwise

Each time you press this key combination the picture

rotates 90° (90°, 180°, 270°, 0°).

Shift + Option + R Rotates the camera picture counter clockwise

Each time you press this key combination the picture rotates 90° counter clockwise (270°, 180°, 90°, 0°).

R Rotate image clockwise steplessly

Shift + R Rotate image anticlockwise steplessly

Option + I Mirror camera image

By pressing Option + I, you can mirror the camera image. This is a useful feature if you for example would like to use the camera as a magnifying makeup mirror.

fn + F5 Take a snapshot

There is an audible click, and the image is saved. The file name will be today's date and the current time.

fn + Option + F5 Start/stop video recording

Start recording. The application will display an icon indicating that recording is in progress. Stop recording by pressing the button again. The file name will be

today's date and the current time.

C Switch camera

Z Change image source

X Change split mode

Shift + left arrow Move split left/up

Shift + right arrow Move split right/down



7.5.3.3 OCR view

fn + F4OCR process

> This command takes a picture for OCR processing. The program then switches to text view and the OCR

processed text is read aloud.

Decrease font size Minus

Plus Increase font size

1 Start/Pause reading

If no reading is currently in progress, reading starts,

otherwise reading is paused.

2 Stop reading

This command stops the reading. The next reading will

begin from the start of the text.

3 Read previous

> With this command, the user can go backwards through the text. If the reading mode is sentence, you move backwards through the text one sentence at a time. If the reading mode is word, you move backwards through the text word by word. If the reading mode is

set to character, one character is read for each

keystroke.

4 Read next

> With this command, the user can move forward in the text. If the reading mode is sentence, you move forward through the text one sentence at a time. If the reading mode is word, you move forward through the text word by word. If the reading mode is set as

character, one character is read for each keystroke.

5 Switch reading mode

> This command selects the reading mode that is to be employed when the "Read previous" or "Read next" command is entered. The modes are, character, word, sentence, view and block. Which modes can be

selected depends on the display mode.

В Display mode

> Switches to display mode for OCR-processed text. The available display modes are: "page view", "row view", "word view", "image view", "image and word" and

"image and row".



7.5.3.4 Notepad view

fn + F7 Take a picture and open in Notepad

Option + N New Page

Option + O Open image

Option + S Save image

Cmd + Z Undo

Shift + Cmd + Z Redo

Option + R Rotate clockwise

Shift + Option + R Rotate anti-clockwise

Option + P Select pen tool

Option + L Select the highlighter tool

Option + T Select text tool

Option + E Select the eraser tool


Option + F Select the pan tool



7.5.4 Information and settings window

The Information and settings window consists of a number of different tabs that contain application information and alternative settings.


7.5.4.1 About the application

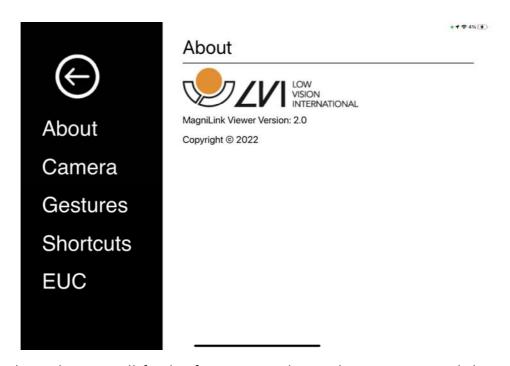

Under this tab you will find information about the camera and the software version.



7.5.4.2 Application Settings

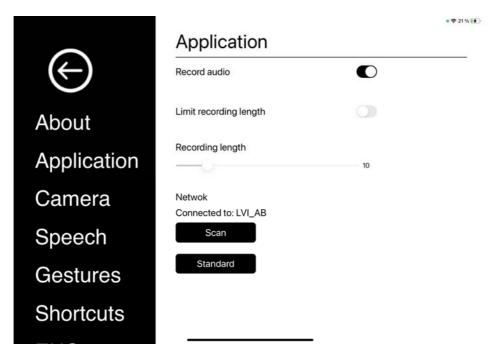

Record audio

Choose whether to record video with audio

Limit recording length

Activate this function to limit the recording length.

Length in minutes


If you have chosen to limit the recording length you can set the limit here in minutes, from 1 to 60 minutes.

Scan for WiFi networks

A dialog box with available networks will appear.



7.5.4.3 Camera settings

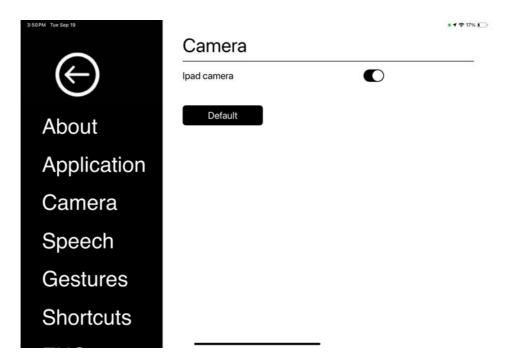


iPad camera

When this is deselected, it is not possible use the built-in cameras.



7.5.4.4 Speech Settings

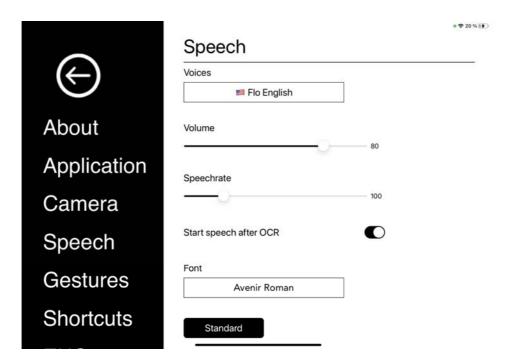

Voices

If several voices are available, the user can choose between them. You can get other voices by downloading languages in the iPad's settings. The OCR engine only supports languages that use the Latin alphabet.

Volume

Setting for the sound level of the voice.

Speaking speed

Setting for the speaking speed.

Start speech after OCR


If this box is checked, text will automatically be read aloud after an image has been OCR processed.

Font

Here the user can set the font for displaying the OCR processed text. The choice of font has no bearing on the OCR result.




7.5.4.5 Gestures

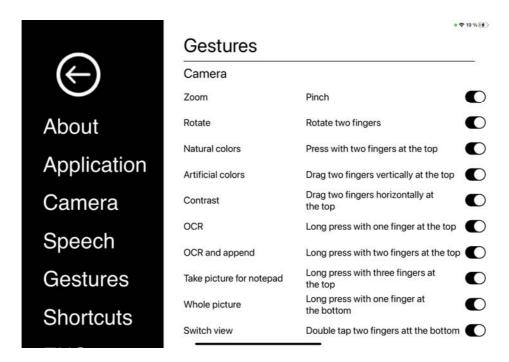

Here you can choose which gestures will be used. To turn off a gesture, you can untick the relevant box.




7.5.4.6 Short cut commands

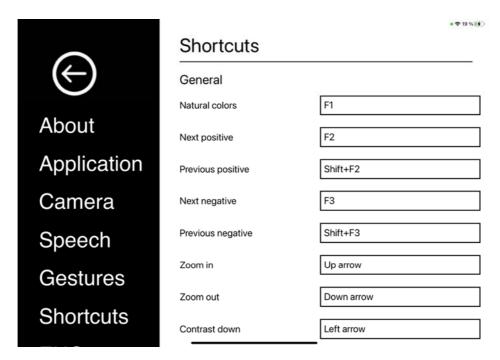

Here the short cut commands used for the application can be changed. To change a short cut command, tab to the command that is to be changed and enter the new keyboard combination. If a combination already being used for another command is entered, the other command will be erased. A new keyboard combination will need to be entered for the other command.



7.5.4.7 EUC

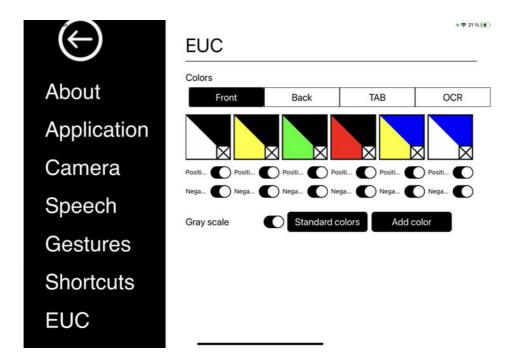

The camera can be configured under this tab.

Colours

It is possible to remove and change the camera's artificial colours.

- To remove a colour combination, press X.
- To add a colour combination, press Add.
- To change a colour combination, press one of the triangular fields and a colour dialog box will appear. Select colours and press OK.
- To remove either the positive or the negative component. Uncheck the "Positive" or "Negative" checkboxes.
- To restore the colours, press "Default colours".

Grey scale

Choose if you wish to have grey scale or not.



8 Working with the reading camera

Your reading camera is now ready to use. It is important that the workplace around your MagniLink is comfortable, and that you sit correctly. This is so that you can use the camera for as long as possible without putting undue strain and stress on your neck and back.

You should bear the following in mind:

- Your chair should be positioned close to the table on which the equipment is located, and you should not sit in the chair for too long. We recommend a good office chair with adjustable height.
- The seat of the chair should be at a height that does not cause your legs to become numb; legs should be at an angle of 90 degrees and you should rest your feet on the floor.
- The reading table should be at a height at which you can rest your lower arm horizontally on it. It is important that the table is neither too high nor too low for you. The ideal solution is if the screen is slightly below eye level and in as straight a line in front of you as possible.
- Shut out daylight. Lights in the ceiling, table lamps and light from windows can cause reflections on the monitor. For this reason, avoid placing lights where they shine directly at the screen or at yourself.



9 Troubleshooting

If the indicator light is flashing:

A red light or a flashing red light indicates a system error. Restart the system by disconnecting and reconnecting all cables and rebooting the system. If a red light is still displayed, contact your service technician.



10 Technical information

Magnifying area HD camera 1,4 - 75 x (15,4" 16:9 screen)

Magnifying area FHD camera 1,1 - 75 x (15,4" 16:9 screen)

Power output 5 W

Power output, standby 1.7 W

Weight 1.9 kg

Refresh rate 60 Hz

Dimensions BxDxH 350x305x390 mm

Operational temperature 0 to 30°C

Storage and transportation temperature -20 to 60°C



Disposal of old electrical and electronic equipment (applies for EU countries and all other European countries that have specific collection systems)

If the product or its packaging has this symbol on it, it is not to be handled as regular domestic waste. It should instead be deposited at a suitable collection centre for the recycling of electrical and electronic equipment. By ensuring that this product is properly taken care of, you are helping to prevent the negative impact on health and the environment that might otherwise result from inappropriate disposal of this product. Recycling helps in the management of our natural resources. For more detailed information regarding the recycling of this product, you can contact your municipality, your waste management company or the store where you purchased the product.



11 Declaration of Conformity

DECLARATION OF CONFORMITY

Manufacturers name:		LVI Low Vision In	ternational AB	
Manufacturers Address:		Verkstadsgatan 5 S-352 46 Växjö Sweden	5	
		Sweden		
Web:		http://www.lvigl	obal.se	
SRN (Single Registration Number):		SE-MF-00000417	78	
Basic UDI-DI (GMN):		7330724MLSEC		
Brand name or trademark:		MagniLink		
Product code:		MLS-HD-2, MLS-FHD-2		
Classification:		Class 1		
Type of equipment:		Reading Aid		
Conformity assessment route:		LVI Low Vision International AB uses the following procedures for the CE-labeling of their products according to the Regulation MDR 2017/745:		
		<u>Class [1]:</u> EC confo Annex I + Annex II	rmity declaration according to +Annex VII	
This declaration of conformity is issued under the sole responsibility of LVI Low Vision International AB. We hereby declare that he medical device(s) specified above meet the provision of the Regulation (EU) MDR 2017/745 for medical devices. This declaration is supported by the Quality System approval to ISO 9001 issued by Intertek. All supporting documentation is retained at the premises of the manufacturer.				
■ Manufacturer			representative	
Date	Signature		Position	
20-05-2021	Helm	~~ <u> </u>	Managing Director	
	Clarification			
	Henrik Blomdahl			



Alphabetical index

About LVI	5
About the application	38
Accessories	
Activate driver	21
Application Settings	39
Camera settings	
Camera view22, 31	
Cleaning	8
Control box	16
Declaration of Conformity	48
EUC	44
Functions via gestures	31
Functions via menus	22
Functions via the keyboard	34
General	
Gestures	42
Hardware	14
Information	8
Information and settings window	38
Installation of docking station	15
Installation of hardware	14
Installation of software	19
Introduction to the MagniLink S	6
MagniLink Viewer	19
Minimum system requirements	19
Notepad view29	, 37
OCR view26, 32	, 36
Packaging	11
Position sensor	
Recommended system requirements	19
Reuse, installation and maintenance	8
Safety information	8
Short cut commands	43
Speech Settings	41
Technical information	47
Troubleshooting	46
Unpacking	10
Using the hardware	16



Using the software	22
Working with the reading camera	45