



Impulsarm höger WD-12/30
03496,01

Glidklack impulsarm 12/30 C/CD	04456,31
Mont. bricka impulsarm WD-12/30	40513,31

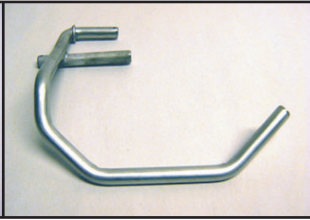


Impulsarm vänster WD-12/30
03496,02

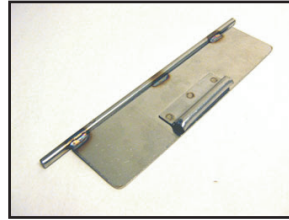

Tryckplatta WD-12/30 C/CD
03497,01

Vridfjäder impulsorg. WD-12/24	04457,31
Magnet rund 6x50	602,0551

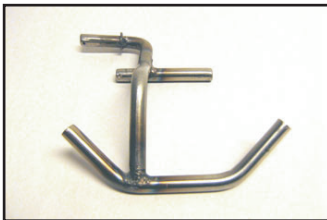

Impulsarm inm. V-H WD-12C -85
31093,01



Impulsarm inm. H-V WD-12C -85
31093,02




Impulsarm inm. HÖ WD-12C/CD
32401,01




Impulsarm inm. VÅ WD-12C/CD
32401,02

Magnet rund 6x50	602,0551
Glidklack impulsarm 12/30 C/CD	04456,31
Mont. bricka impulsarm WD-12/30	40513,31

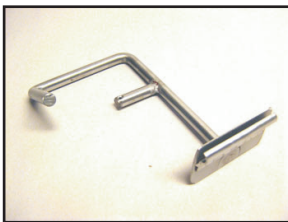

Slutsköljn. impuls WD-12/30 CD
32747,01

Magnet rund 6x50	602,0551
------------------	----------

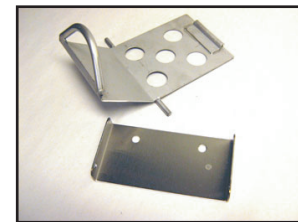


Slutsköljn. impuls WD-150/330
33920,01

Magnet rund 6x50	602,0551
Magnet 6x24mm	60219830



Brytare H-V WD-150/330 RELÄ
34831,01

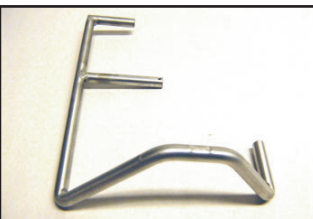

Brytare V-H WD-150/330 RELÄ
34831,02

Magnet rund 6x50	602,0551
Fäste brytare WD-150/330	42373,31
Magnet rund 6x37	60200920



Inmatningsbrytare kpl. 151-331
36017,01

Plåt fäste inm. bryt WD-151-331	43333,31
---------------------------------	----------



Slutskö. bryt kpl. WD-151-331
36039,01

Axel I8 WD-151-331	43413,31
Magnet rund 6x50	602,0551
Slutsköljningsbrytare WDT kpl. (magnet ingår)	36039,75



Brytare mellanskölj försp.
36263,01

Axel I8 WD-151-331	43413,31
Hållare brytare mellanskölj	36565,31
Magnet rund 6x50	602,0551