

Littbus double sided shelf 542x1724

Mounting details

No. 1 - Screw M6x38
Art.no. TO5910

No. 2 - Bolt M6x32
Art.no. TO5911

No. 3 - Socket M6x20
Art.no. TO5912

Structural shelf with low back

Art.no:	HP0110-MM (c/c 516)	HP1110-MM (c/c 725)	HP3110-MM (c/c 900)
Width:	490 mm	700 mm	875 mm

Shelf with low back

Art.no:	HP0110 (c/c 516)	HP1110 (c/c 725)	HP3110 (c/c 900)
Width:	488 mm	698 mm	873 mm

Structural shelf with high back

Art.no:	HP0130-MM (c/c 516)	HP1130-MM (c/c 725)	HP3130-MM (c/c 900)
Width:	490 mm	700 mm	875 mm


Shelf with high back

Art.no:	HP0130 (c/c 516)	HP1130 (c/c 725)	HP3130 (c/c 900)
Width:	488 mm	698 mm	873 mm

1.


Assemble the upper and lower structural shelves to the end panel, use screw no. 1.
Position the next upright and screw it to the structural shelves, use bolt no. 2.
(See picture).

Tip!
Start with the low back shelves.

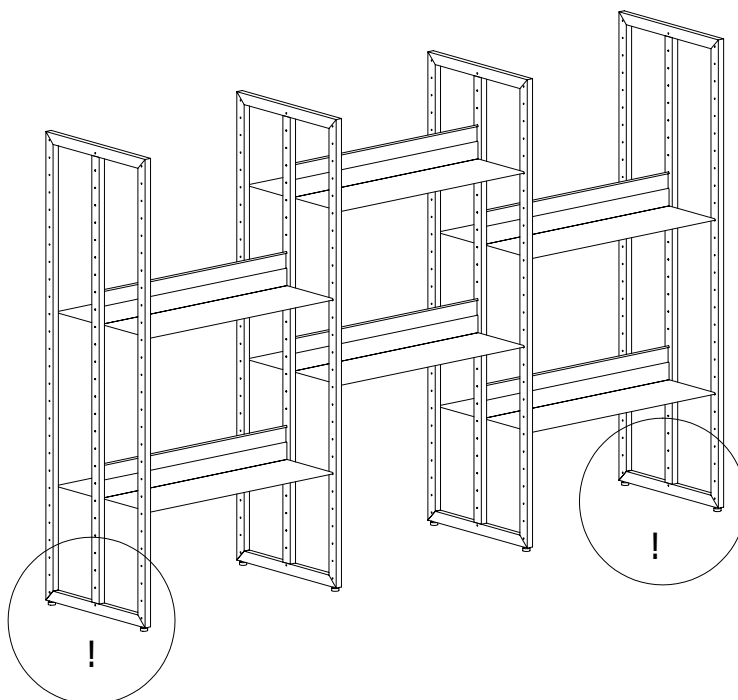


2.

Continue to assemble structural shelves, use bolt no. 2.
Alternate up and down, until the required number of sections are assembled.
Finish with screw no. 1.
(At standard 5 shelves per section, in every fifth hole).


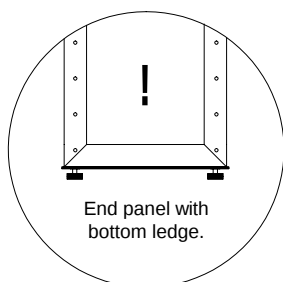


3.

Connect sleeve no. 3 with screw no. 1 in the end panels, (every fifth hole at standard).

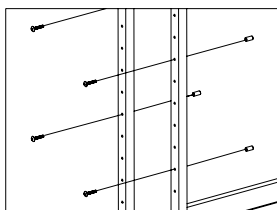


At the inner panels connect sleeve no. 3 with bolt no. 2, (every fifth hole at standard).

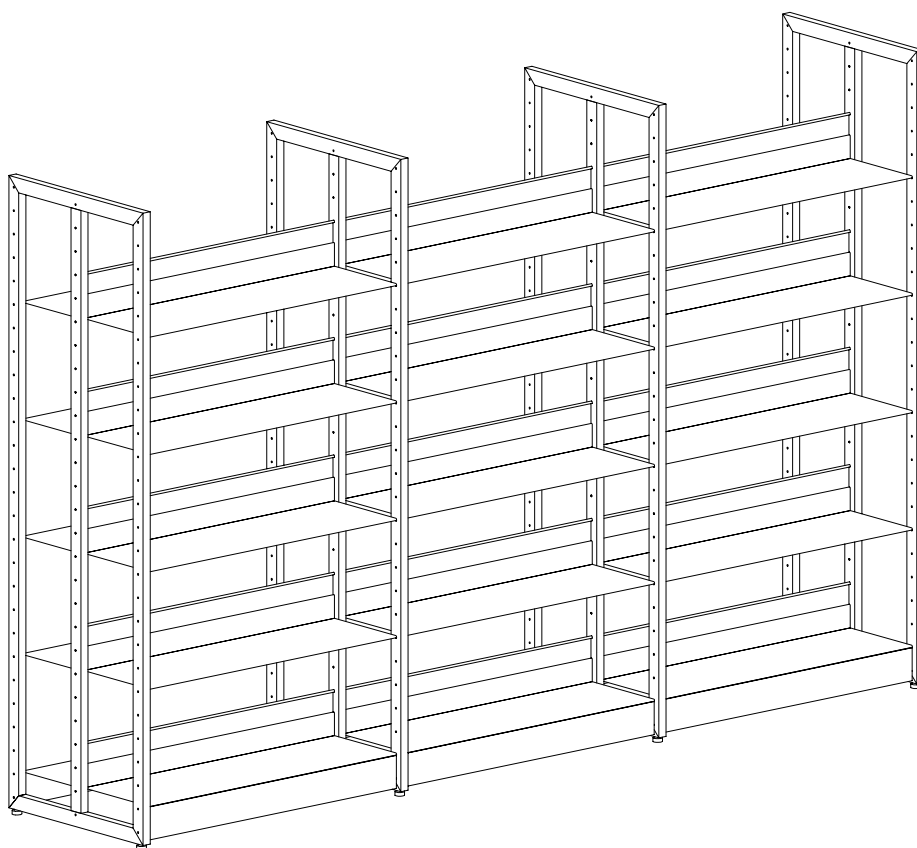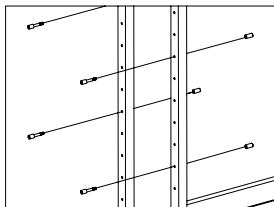

4.


Place the loose shelves.
First locate the shelf front,
Then lower the back into place.

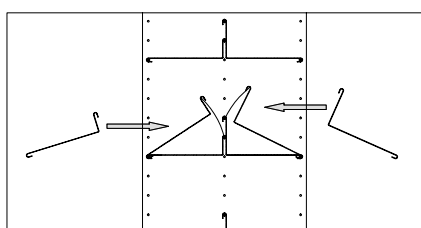

The shelf with base board should be placed in the bottom.

5.


Fitt soft felt pads, on the screws for the shelves highest, in the middle and at the lowest. (9 per end panel).

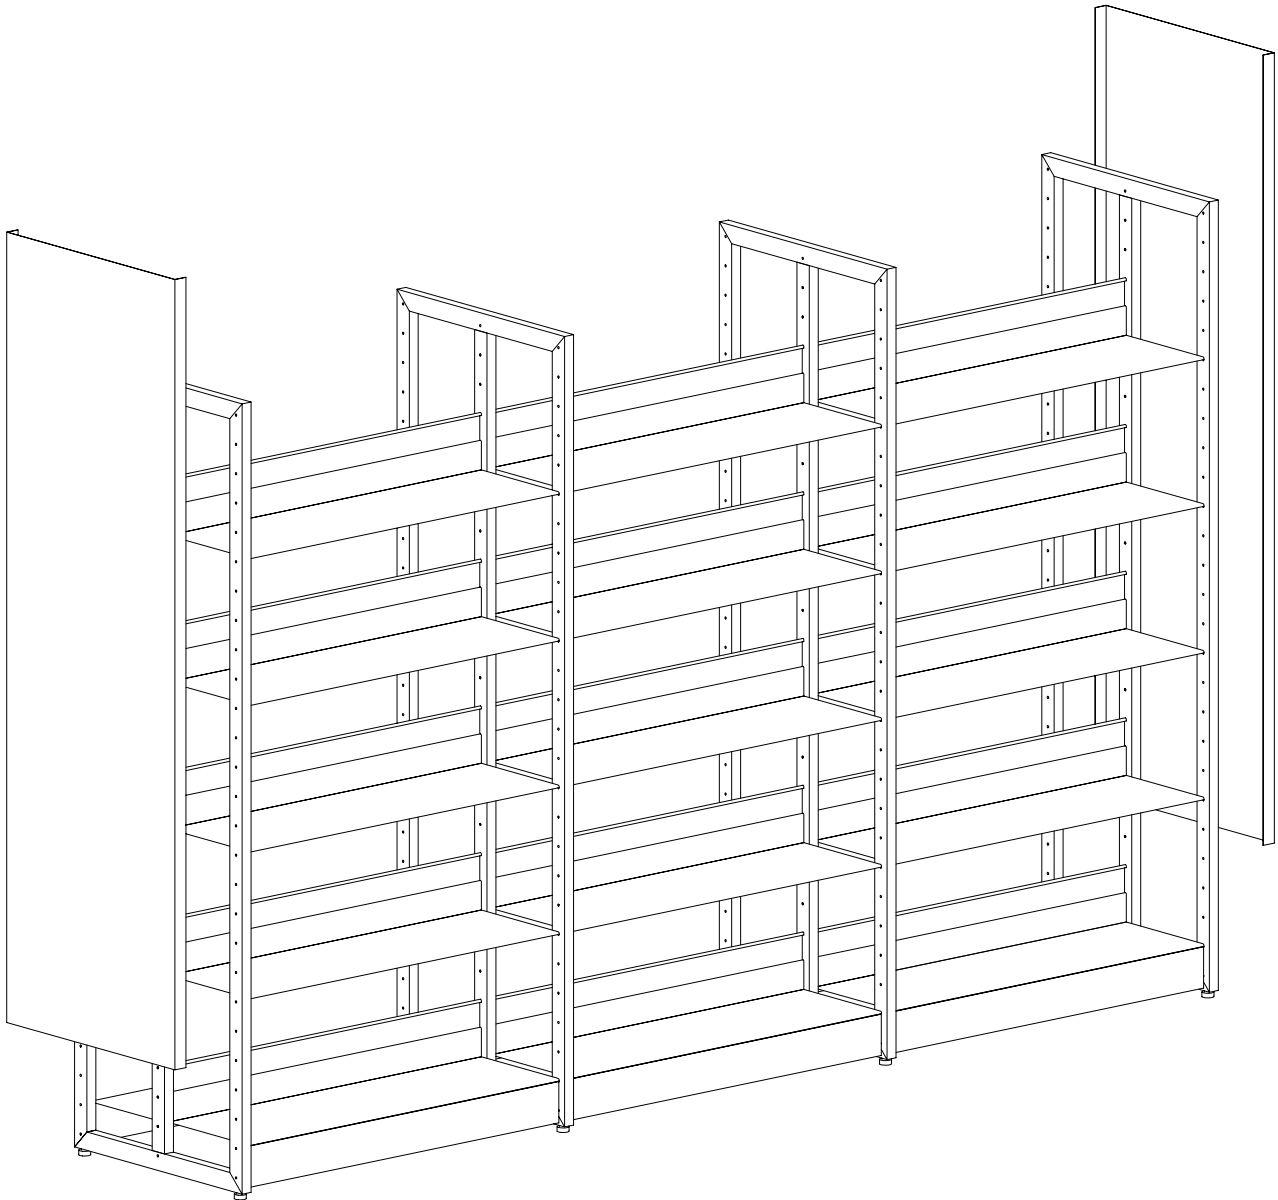

Push the coverings on place at a higher level on the end panel. Then lower the covering, till it stands on the bottom ledge.

6.

Place and lock the top shelves against the top of uprights.
Always begin with the outer.

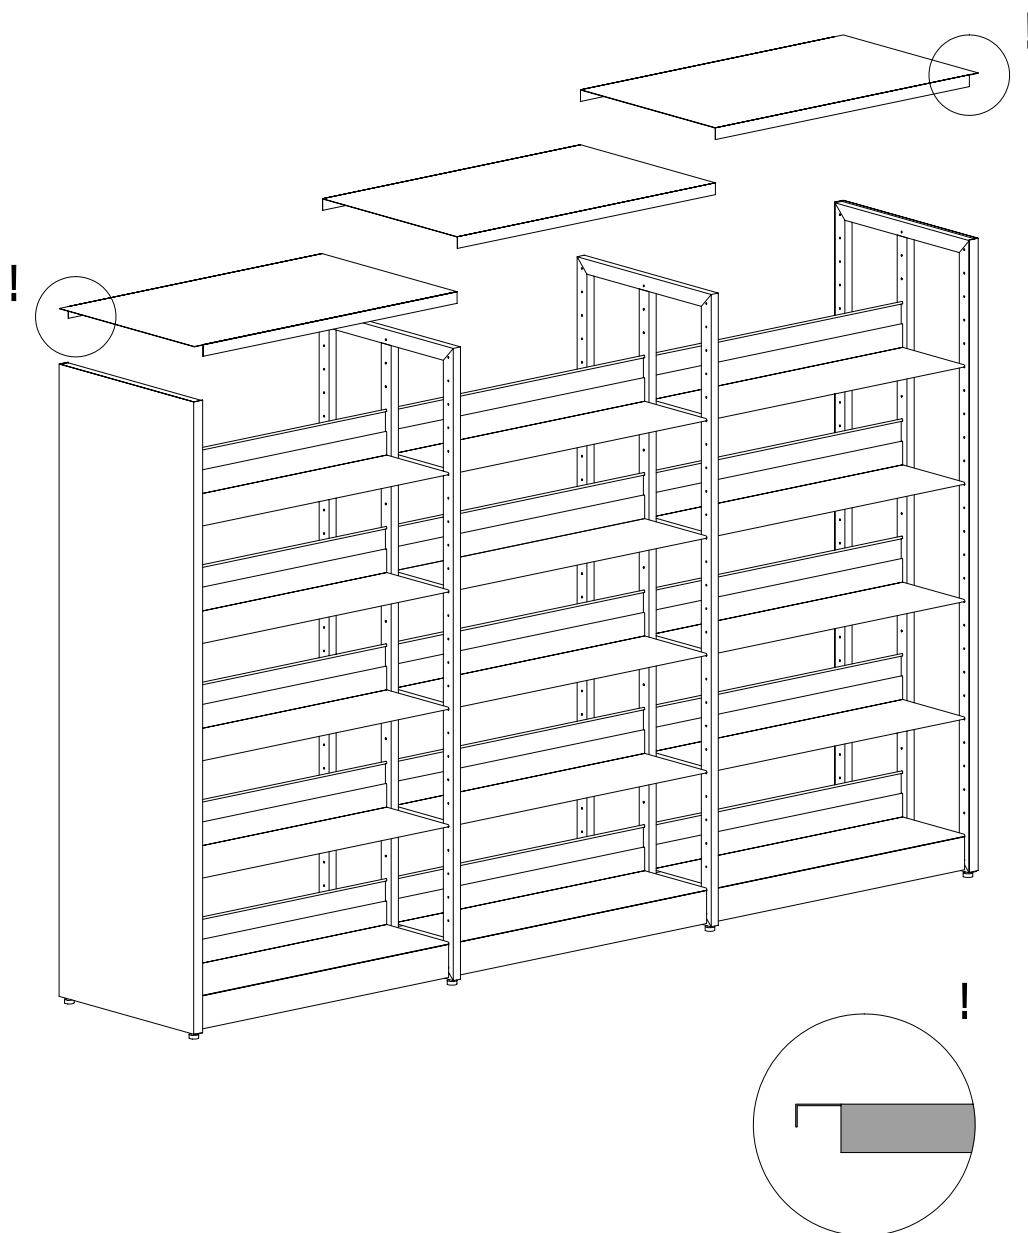

7.

Place the fallstrings (2/shelfplane).
Completed!

