




## Littbus double sided shelf 542x2044

|                                                                                                                                 |  |                                                                                                                             |  |                                                                                                                    |  |
|---------------------------------------------------------------------------------------------------------------------------------|--|-----------------------------------------------------------------------------------------------------------------------------|--|--------------------------------------------------------------------------------------------------------------------|--|
| <b>Mounting details</b>                                                                                                         |  | <b>Structural shelf with low back</b>                                                                                       |  | <b>Shelf with low back</b>                                                                                         |  |
|  <b>No. 1 - Screw M6x38</b><br>Art.no. TO5910  |  |                                            |  |                                  |  |
|  <b>No. 2 - Bolt M6x32</b><br>Art.no. TO5911   |  | Art.no: <b>HP0110-MM</b> (c/c 516) <b>HP1110-MM</b> (c/c 725) <b>HP3110-MM</b> (c/c 900)<br>Width: 490 mm   700 mm   875 mm |  | Art.no: <b>HP0110</b> (c/c 516) <b>HP1110</b> (c/c 725) <b>HP3110</b> (c/c 900)<br>Width: 488 mm   698 mm   873 mm |  |
|  <b>No. 3 - Socket M6x20</b><br>Art.no. TO5912 |  | <b>Structural shelf with high back</b>                                                                                      |  | <b>Shelf with high back</b>                                                                                        |  |
|                                                                                                                                 |  |                                            |  |                                  |  |
|                                                                                                                                 |  | Art.no: <b>HP0130-MM</b> (c/c 516) <b>HP1130-MM</b> (c/c 725) <b>HP3130-MM</b> (c/c 900)<br>Width: 490 mm   700 mm   875 mm |  | Art.no: <b>HP0130</b> (c/c 516) <b>HP1130</b> (c/c 725) <b>HP3130</b> (c/c 900)<br>Width: 488 mm   698 mm   873 mm |  |

### 1.


Assemble the upper and lower structural shelves to the end panel, use screw no. 1.  
Position the next upright and screw it to the structural shelves, use bolt no. 2.  
(See picture).

**Tip!**  
Start with the low back shelves.

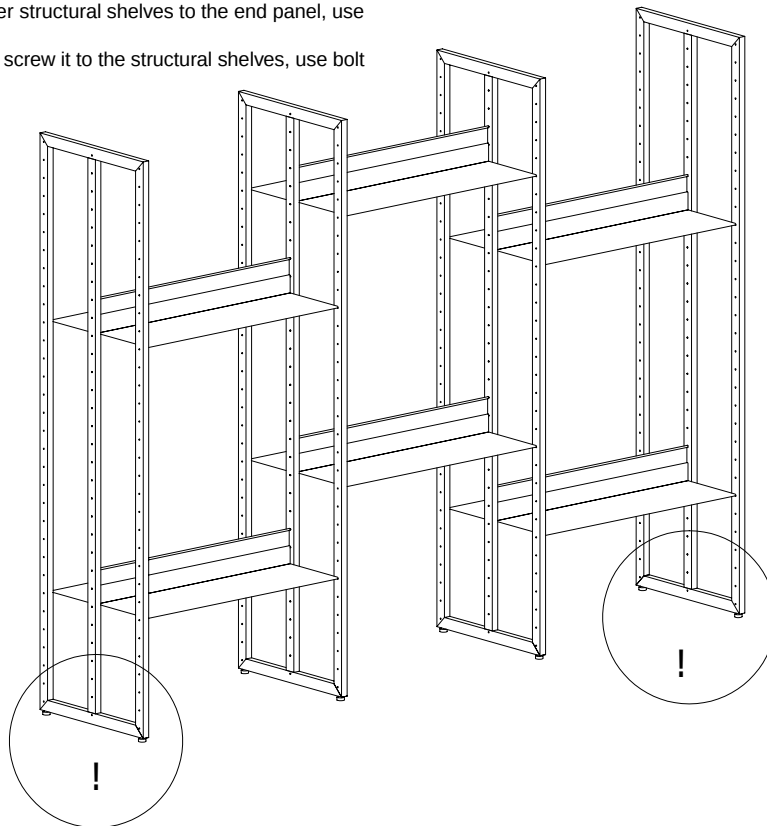


### 2.

Continue to assemble structural shelves, use bolt no. 2.  
Alternate up and down, until the required number of sections are assembled.  
Finish with screw no. 1.  
(At standard 6 shelves per section, in every fifth hole).


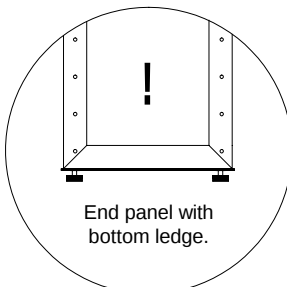


# 3.

Connect sleeve no. 3 with screw no. 1 in the end panels,  
(every fifth hole at standard).

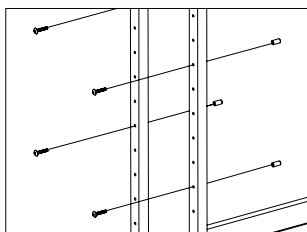


At the inner panels connect sleeve no. 3 with bolt no. 2,  
(every fifth hole at standard).

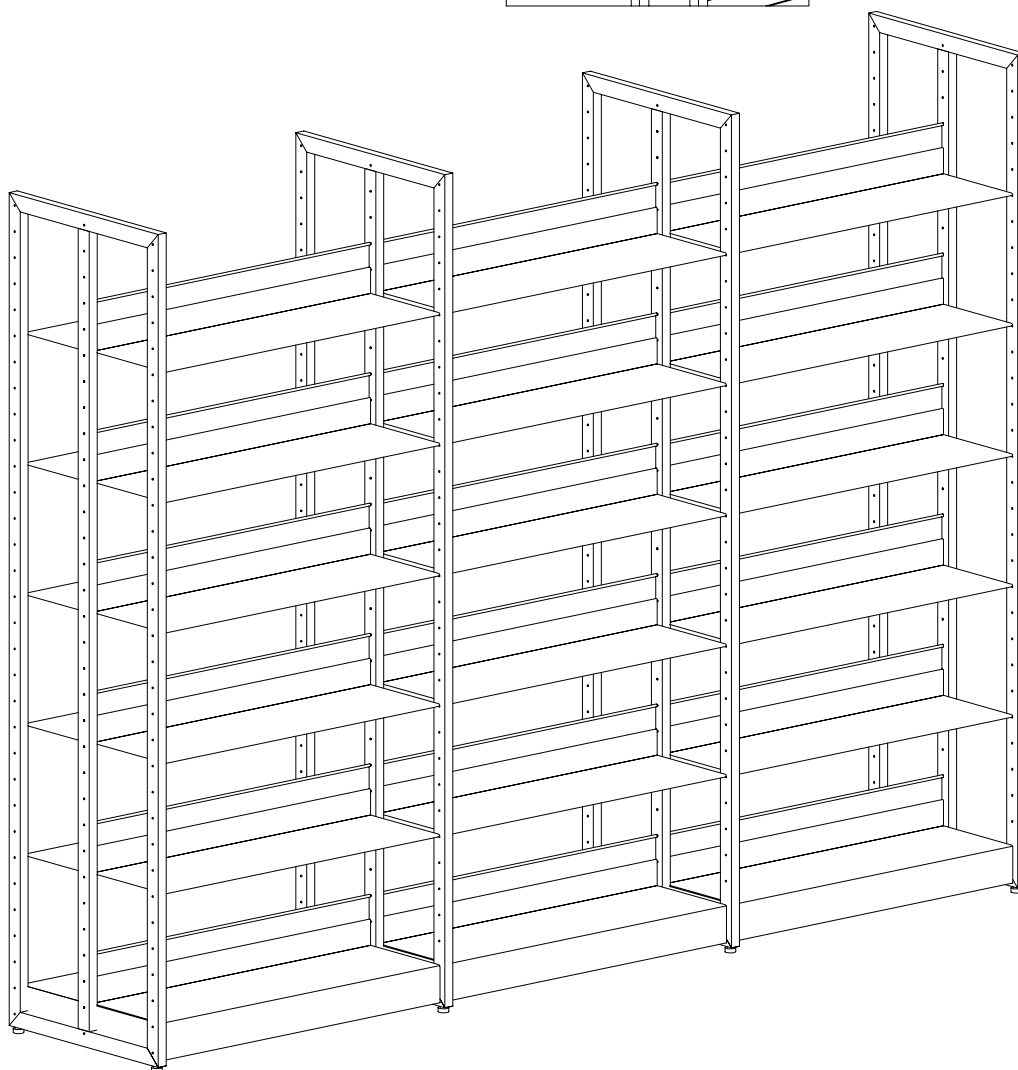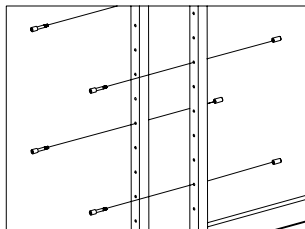

# 4.


Place the loose shelves.  
First locate the shelf front,  
Then lower the back into place.

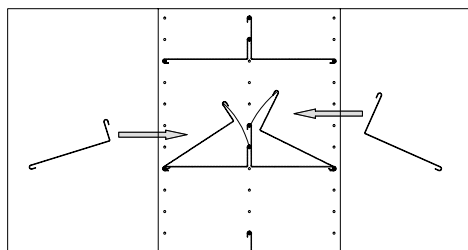

The shelf with base board should be  
placed in the bottom.

# 5.


Fitt soft felt pads, on the screws for the shelves highest, in the middle and at the lowest. (9 per end panel).

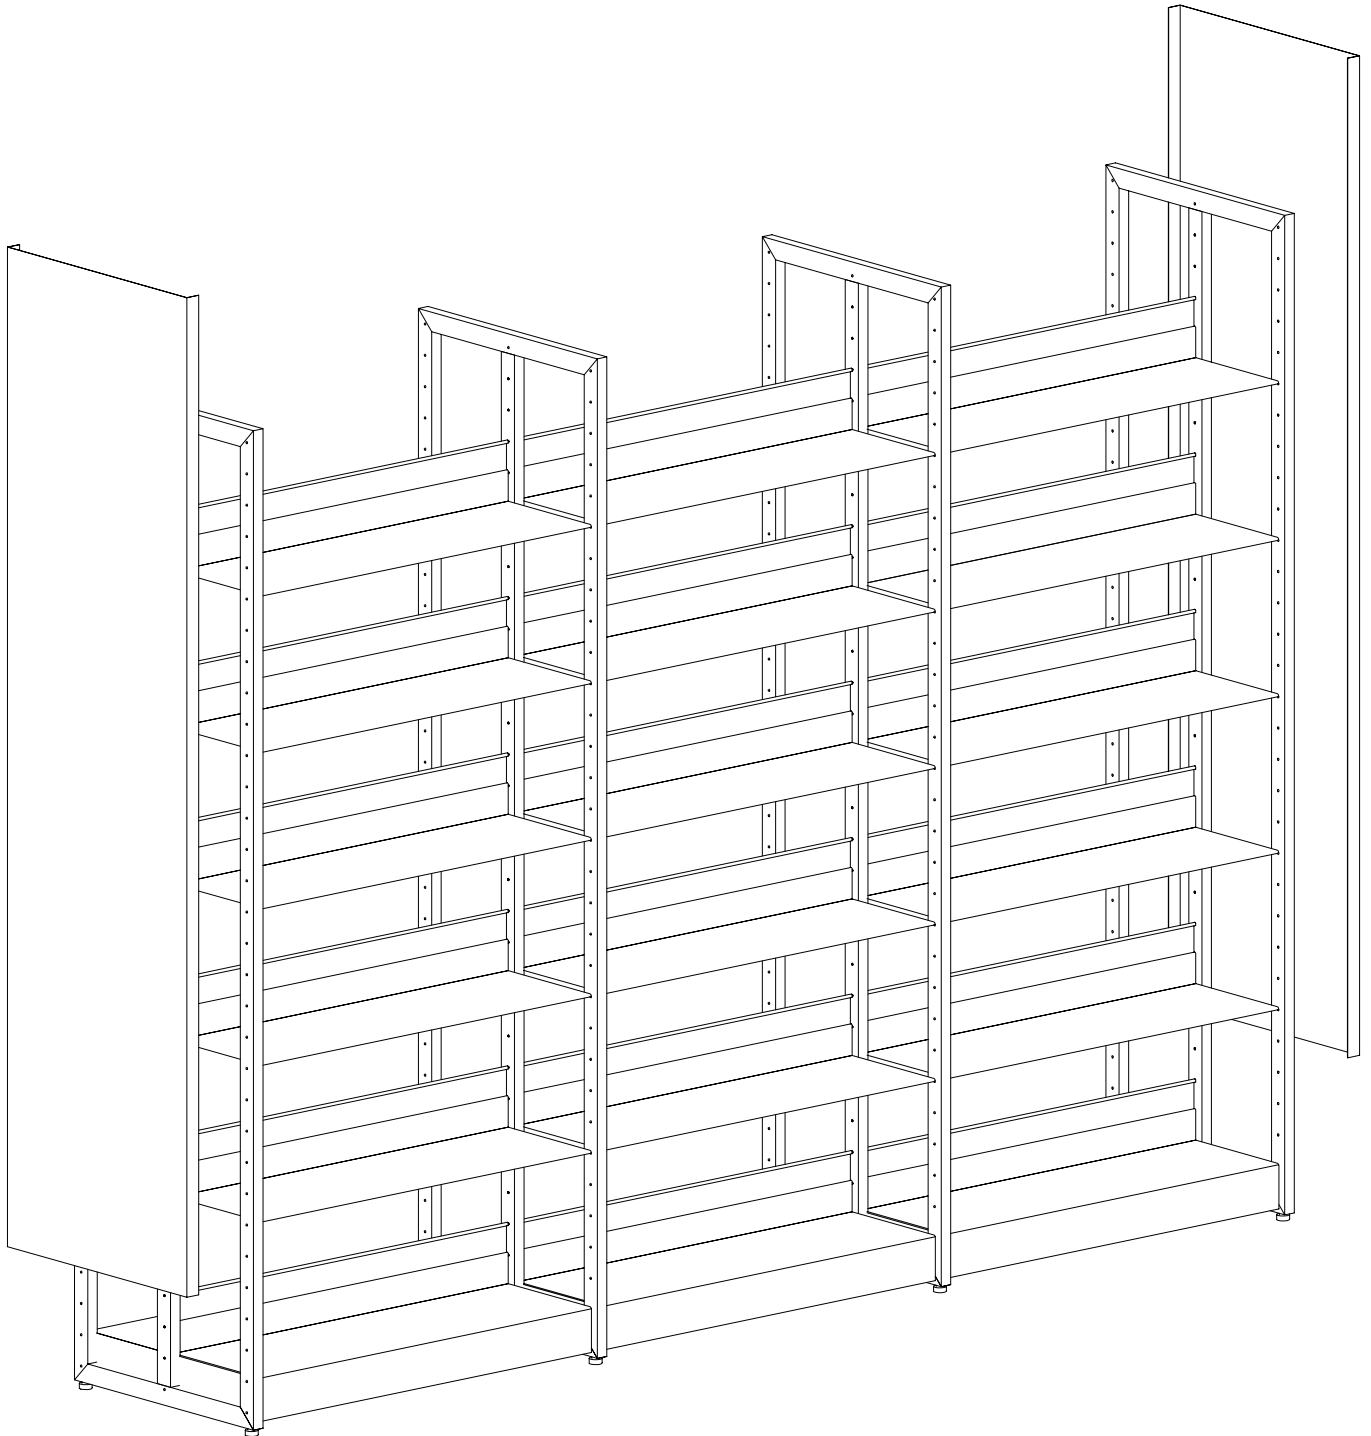

Push the coverings on place at a higher level on the end panel. Then lower the covering, till it stands on the bottom ledge.

# 6.

Place and lock the top shelves against the top of uprights.  
Always begin with the outer.

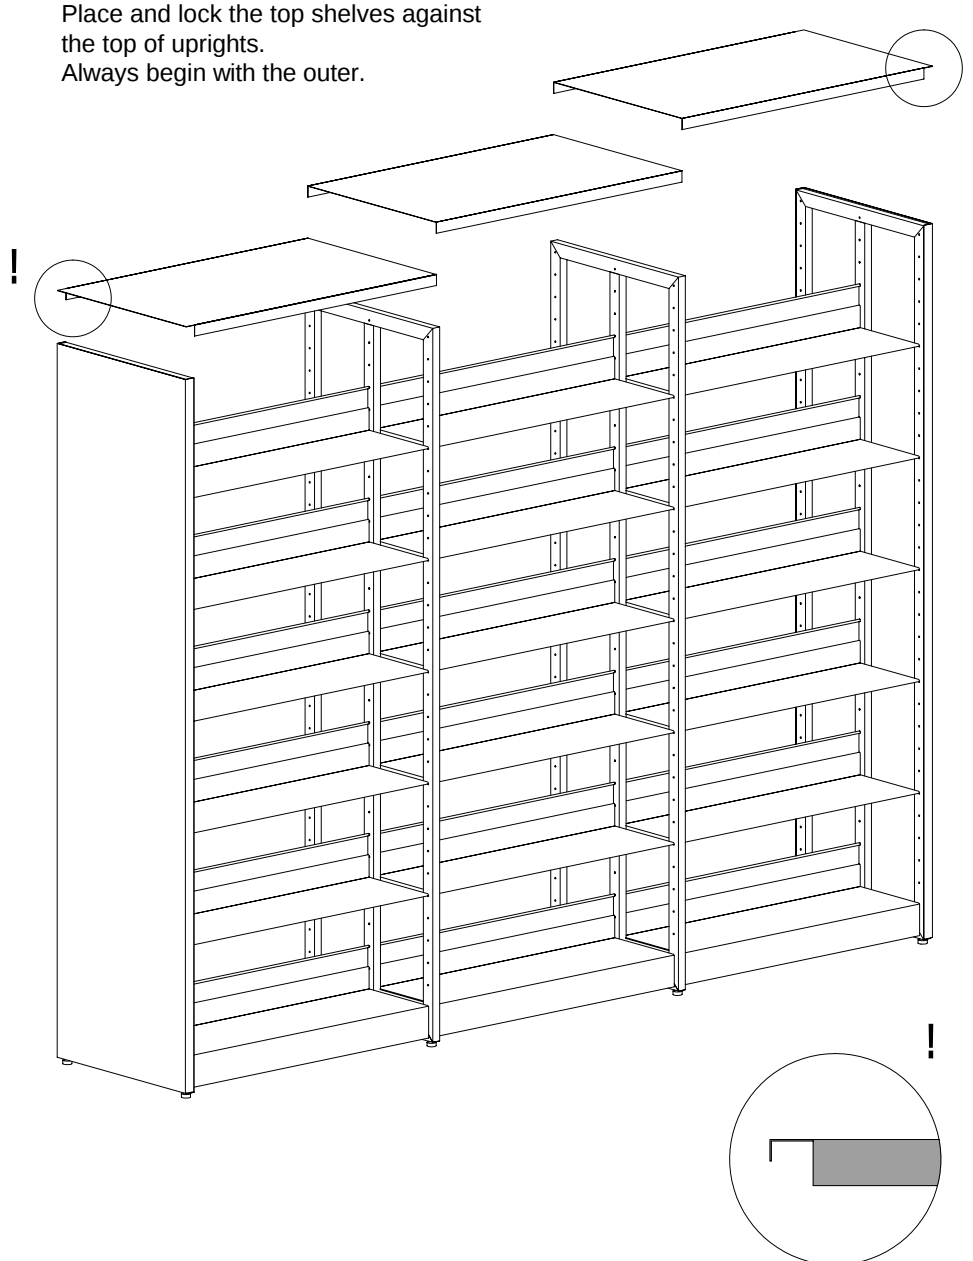

# 7.

Place the fallstrings (2/shelfplane).  
**Completed!**

