

Assembly



Instructions

LITTBUS Steel bookcase end sign with glass (TO1514-S, TO1515-S, TO1519-S)



No. 1 Screw M6 x 38 (4x)




No.17 Nylon washer 6.4x12x1.5 (8x)




No. 19 M6 Nut (4x)



Escutcheon (4x)

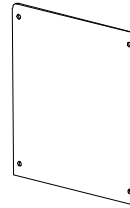


Glass (1x)

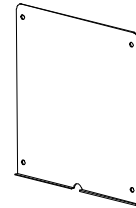

End sign (1x)

1.

First assemble the escutcheons with four holes between in suitable height, use screw no. 1.

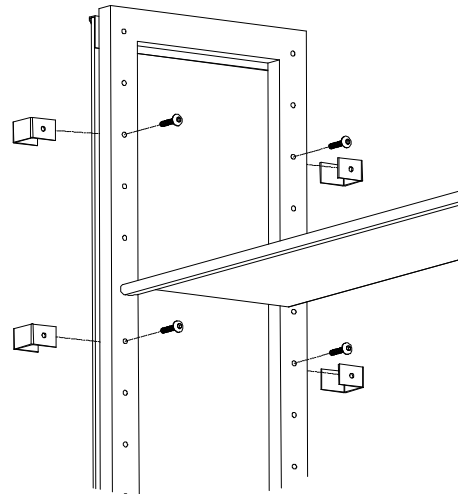

2.

The escutcheons should now be fixed so that the little bolt will point from the covering.

Now lead **the end sign, washer, glass, washer** and last **the nut**, in that sequence. (*Pull the nuts with finger force*).

