

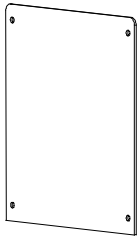


Assembly

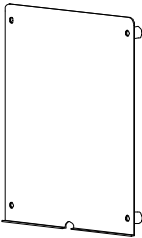


Instructions

LITTBUS Bookcase end sign with glass (TO1514, TO1515)

	No. 4 Screw M6 x 57 (4x)		
	No.17 Nylon washer 6.4x12x1.5 (8x)	Glass (1x)	End sign (1x)
	No. 19 M6 Nut (4x)		

1.

First put screw no. 4 in the panel from the inside with 4 holes between, in suitable height.

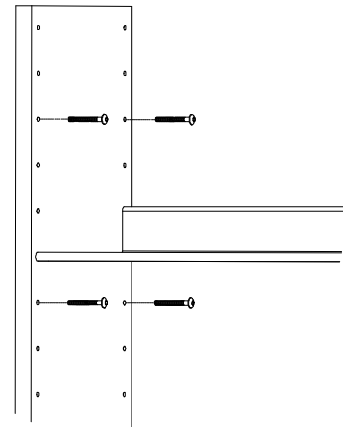

2.

Now lead the **end sign, washer, glass, washer and last the nuts**, in that sequence. Pull the nuts with finger force.

