

Assembly



Instructions

LITTBUS


Expomagasin for 374 deep shelves. (TO1914/TO1916)



No. 9 M4 x 15 socket




No. 10 M4 x 20 screw

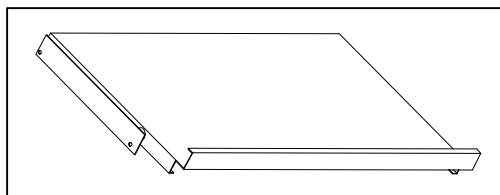

1.

Assembly the shelves in every 6th hole with start at the second hole from the bottom. (5 shelves + top at 2044). Place the expo magasin in the holes directly under a shelf. Use **socket no. 9** and **screw no. 10**.

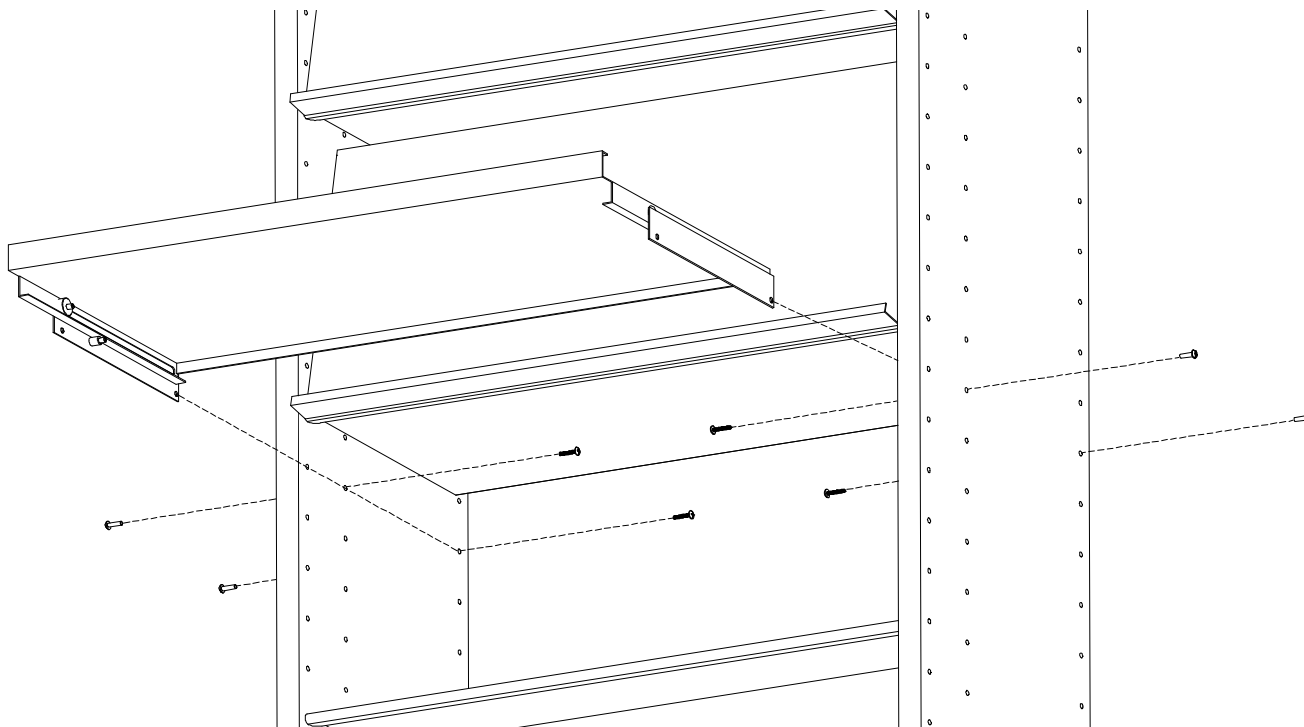

2.

