


- Wood -

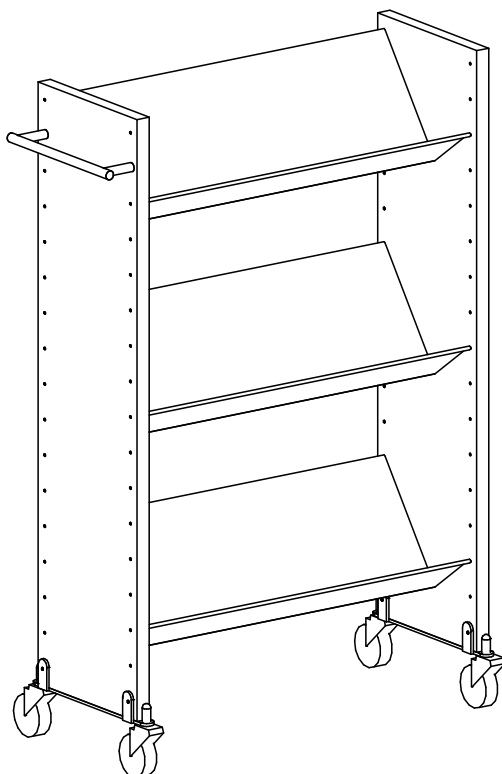


Before to start assembling...


Do always start with a look at the packing note.

In the packing note you will find important information regarding measurements and how many of each part every position need.


Mounting details

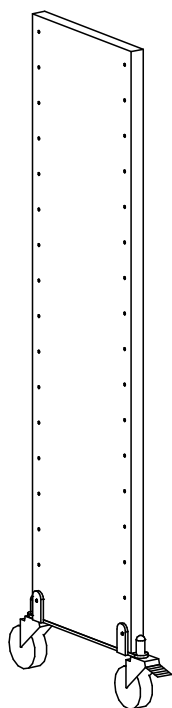

2x
Panel
(With wheel set)

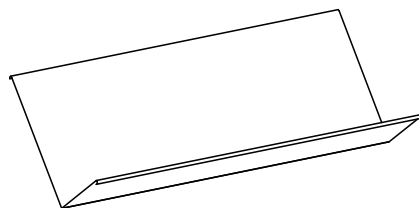

3x
Structural shelf




1x
Handle

14x
Screw M6x35



1


Start to assemble the structural shelves with screw (M6x35).
Note that the ends should be turned so that the dome nut on the wheel set is on the inside of the cart.
The braked wheels should be in the trolleys front.

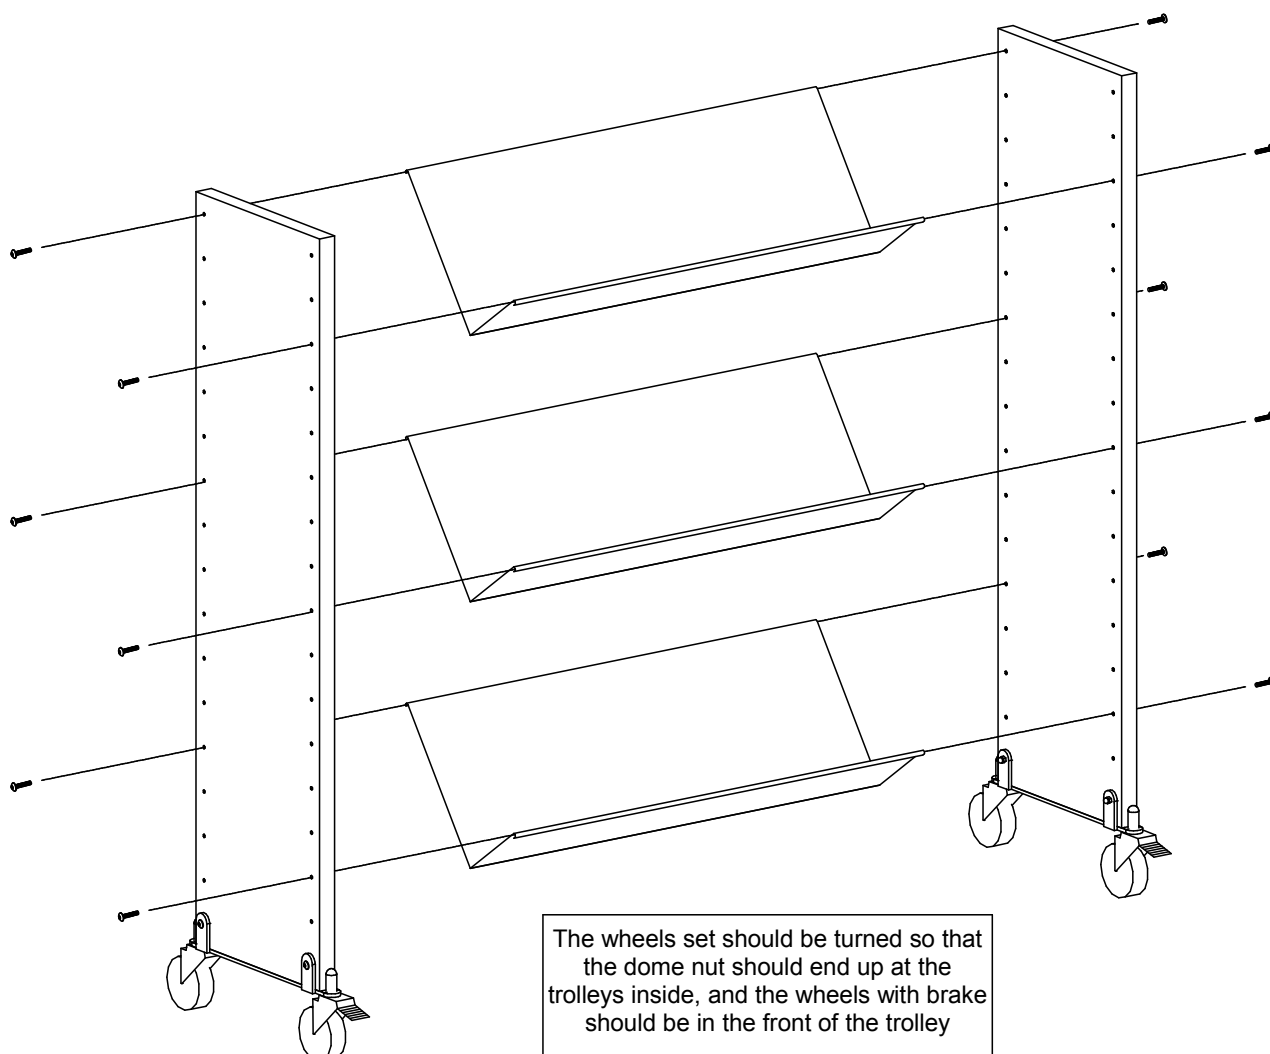

2

Attache the handle in the second hole from top.
Use screw (M6x35) from the inside.

Assembling is Completed!

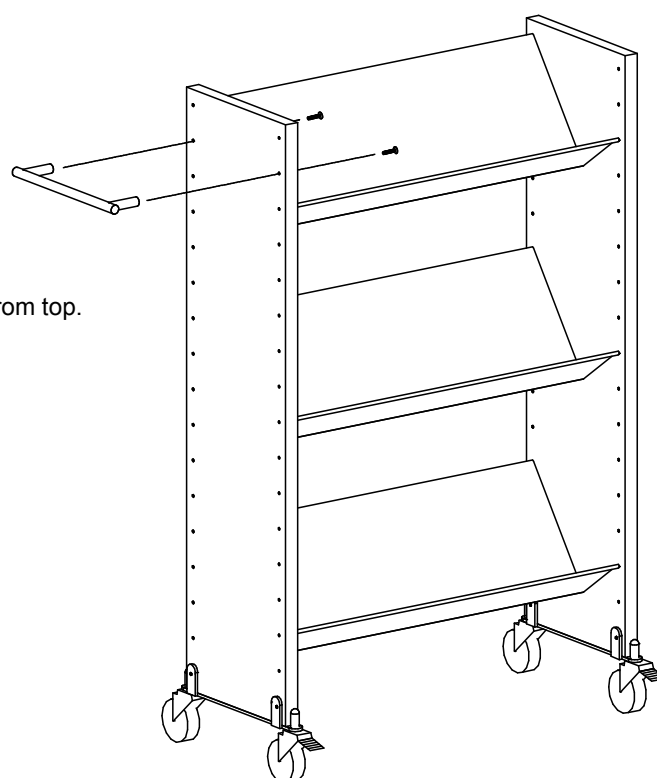

Good to know!
The shelves could be used for flat or sloping display.