


- Steel -

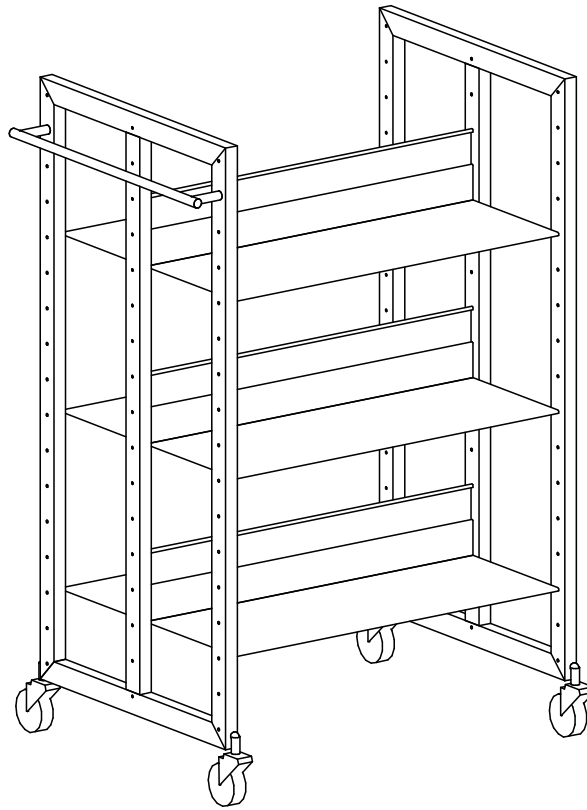


Before to start assembling...

Do always start with a look at the packing note.


In the packing note you will find important information regarding measurements and how many of each part every position need.

Mounting details

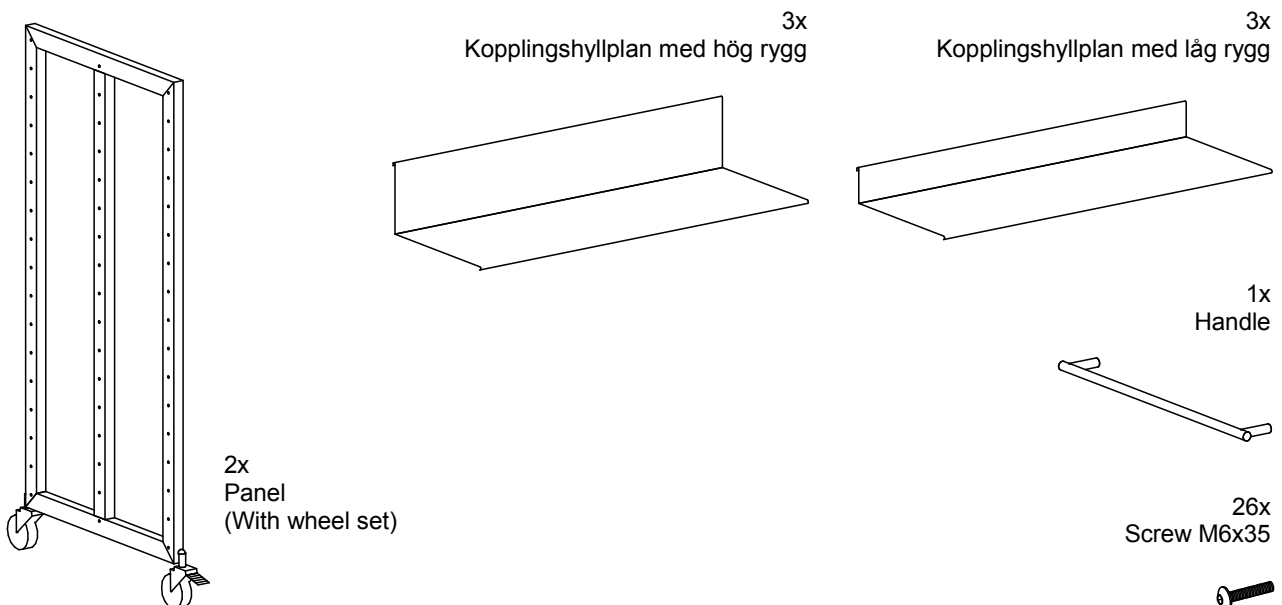

1


Start to assemble the structural shelves with screw (M6x35).
Note that the braked wheels should be in the trolleys front.

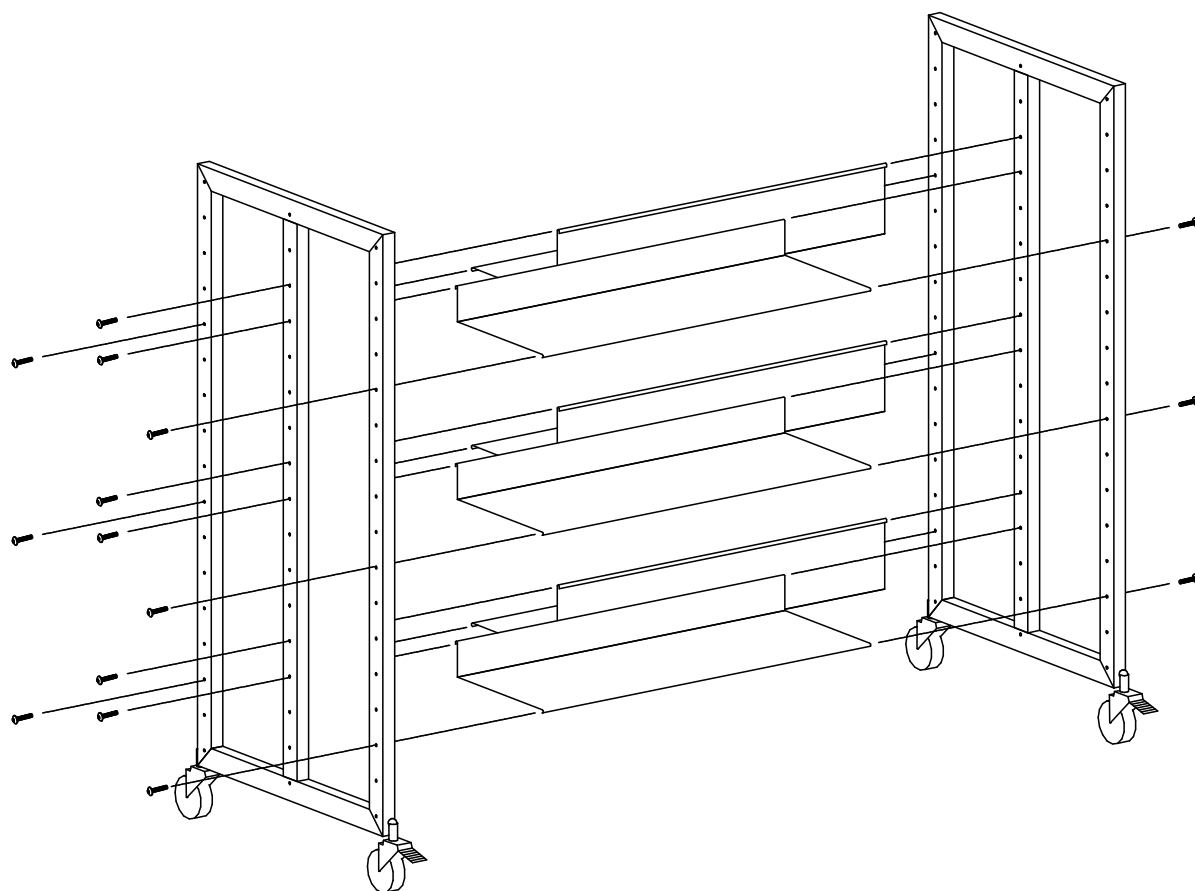

2

Attache the handle in the second hole from top.
Use screw (M6x35) from the inside.

Assembling is Completed!

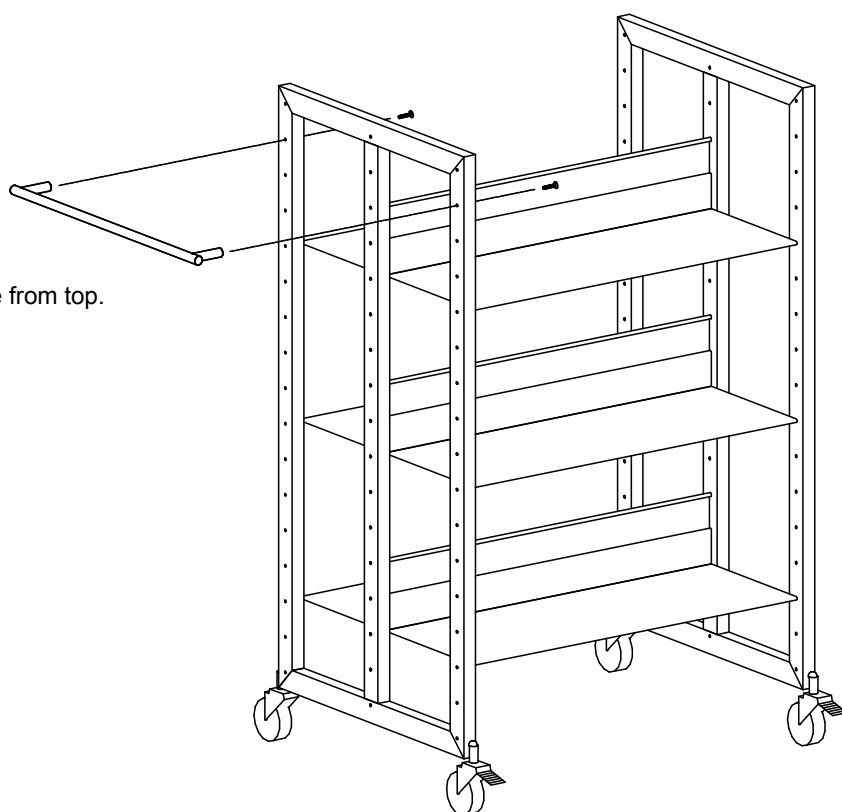

Good to know!
The shelves could be used for
flat or sloping display.