
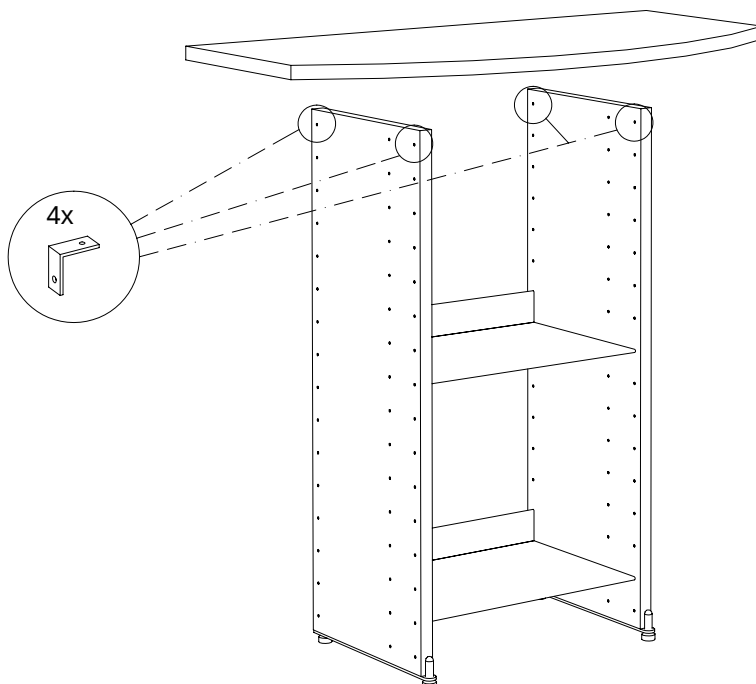


Assembly instruction - PC terminal

1.

Connect the panels with the structural shelves.
Use M6x32 mm screw (8 pcs).

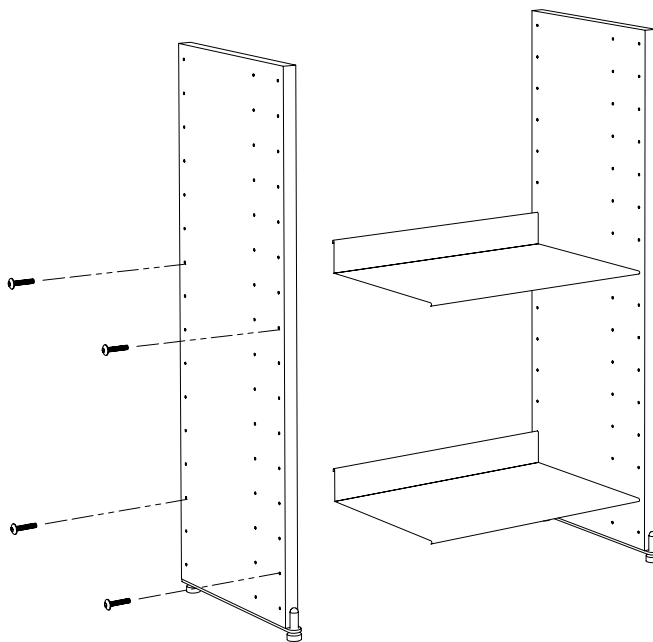


2.

Fix the metal angles in the upper holes with M6 screws.
Assembly the top board to the metal angles.
Use 4,5x20 screws

3.

Fix the back with M6 screw and socket.

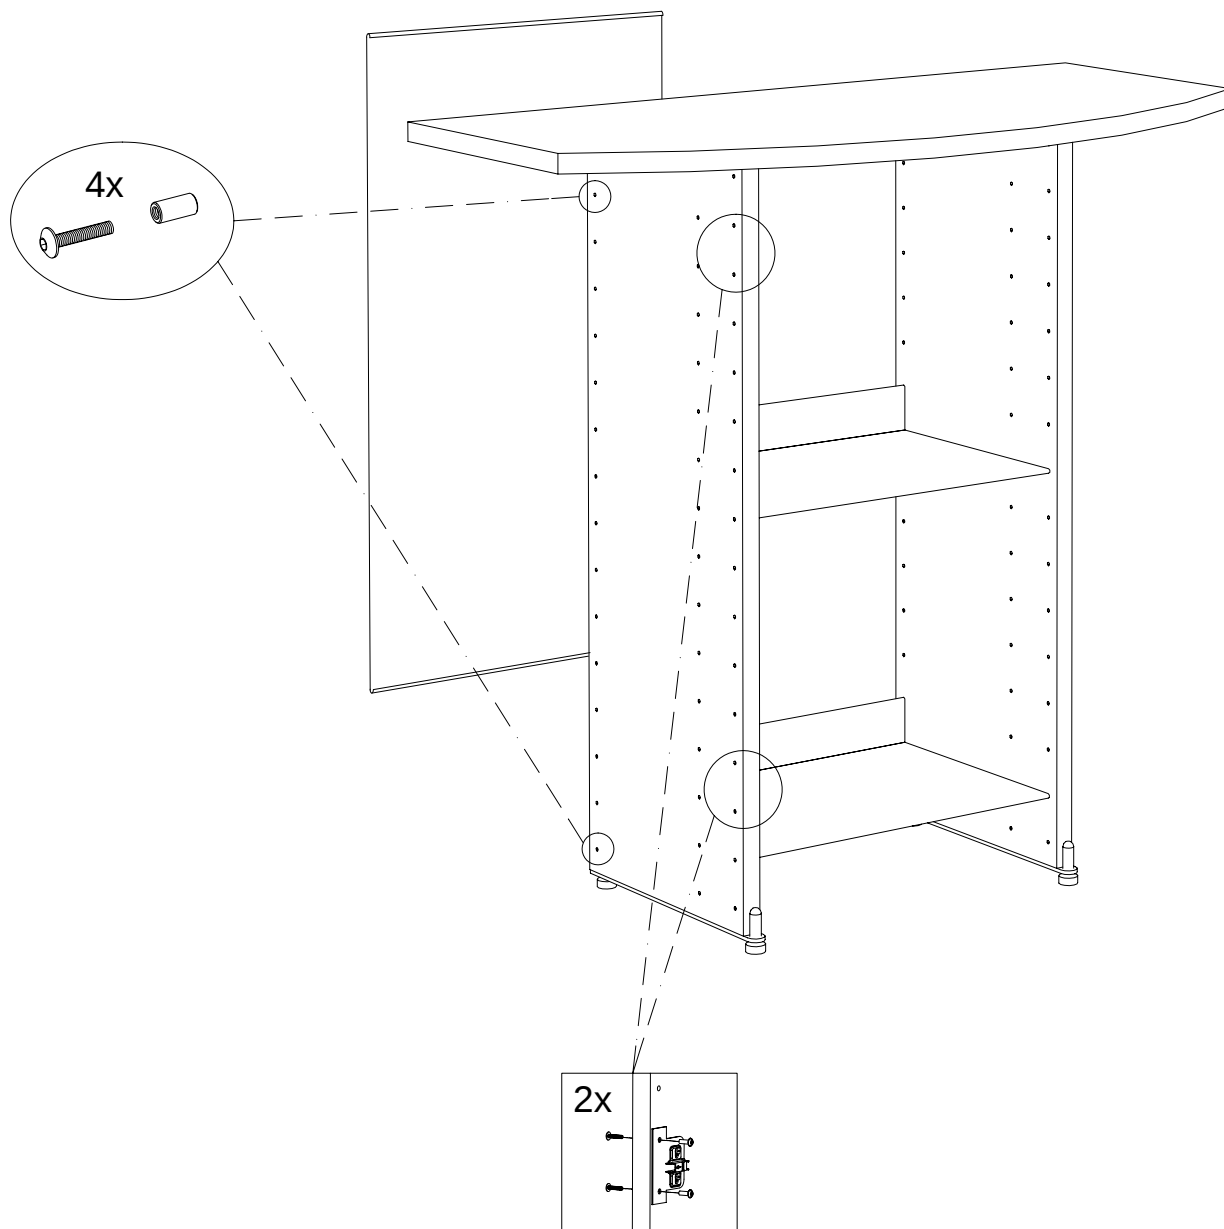


4.

Connect the assemblage plate to the panel with M4 socket and screw.




4.

Assembly the lock so the bolt will fix the ring in the hole.

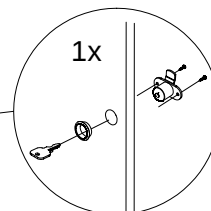

5.

Put the hinges in the holes on the doors, use screw 3x12 mm.

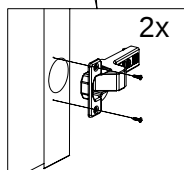

6.

Connect the hinges to the hinges holders.

