


Assembly



Instructions

LITTBUS Writing top TO1120-1, TO1120-2, TO1320-1, TO1320-2


	No. 1 Screw M6 x 38
	No. 13 Screw 4,5 x 25
	No. 18 Nut M6

	Right/left strip
---	------------------

	Writing top
---	-------------


1.

First assembly the left and right strip. Use **screw no. 1** and **nut no. 18**.
(At standard fix the strips in the 11 th hole from the bottom).

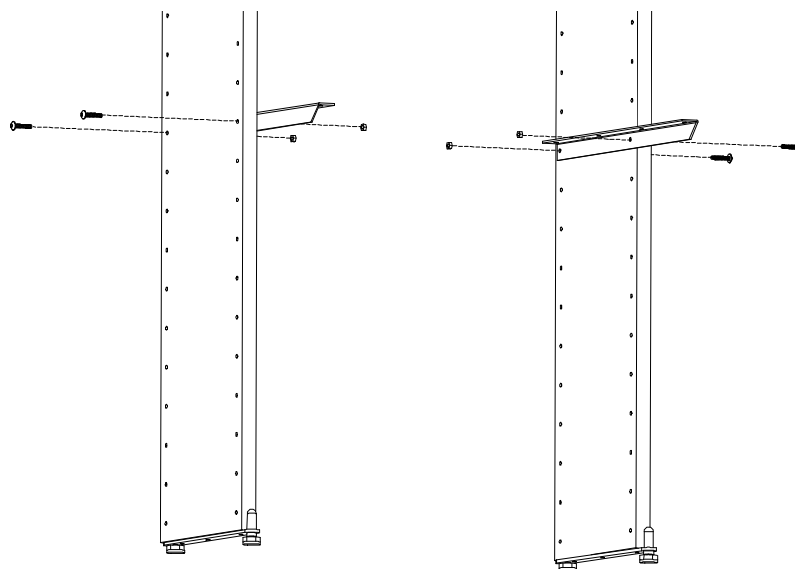

2.

Assembly the writing top with **screw no. 13**.

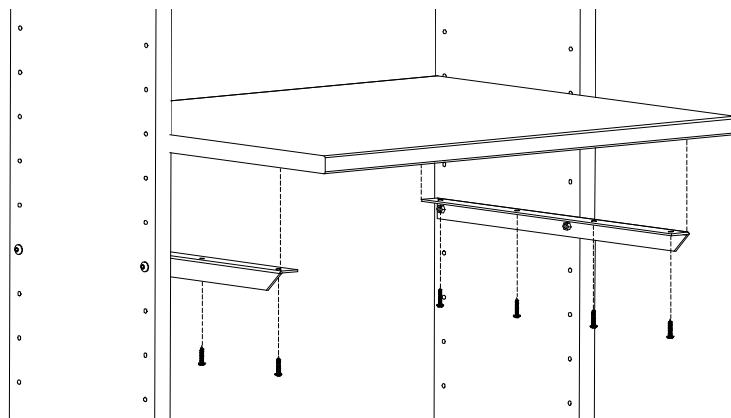

3.

